



parsi sanat

www.parsisanatco.com

05135410946-7

به نام خدا

راهنمای استفاده از PLC های VIGOR مدل VH به شرح زیر می باشد:

جهت بررسی هر یک از موضوعات بر روی لینک نام آن کلیک نمایید .


VH-20AR English User Manual
VH-20AR Farsi User Manual

C. VH-20AR Main Unit User Manual


The VH-20AR Main Unit is a new model of the VH series PLC, it is not only supporting all functions of the original VH series PLC but also providing 4 channel analog inputs and 2 channel analog outputs. Which can extend the application of the VH series at analog controls.

C-1 Dimension and Component Designation

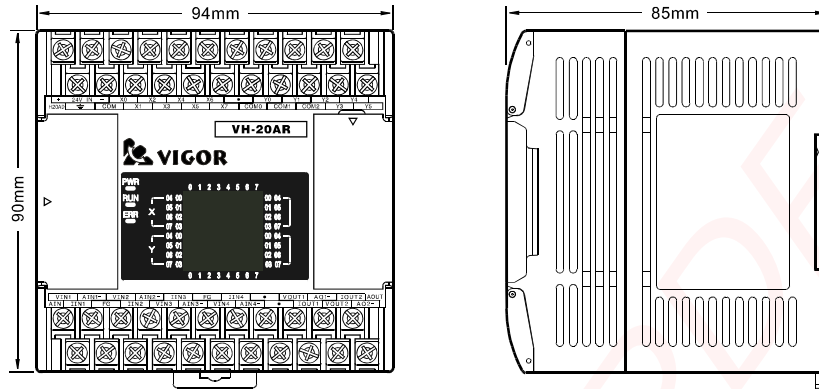C-1-1 Dimension



C-1-2 Component Designation

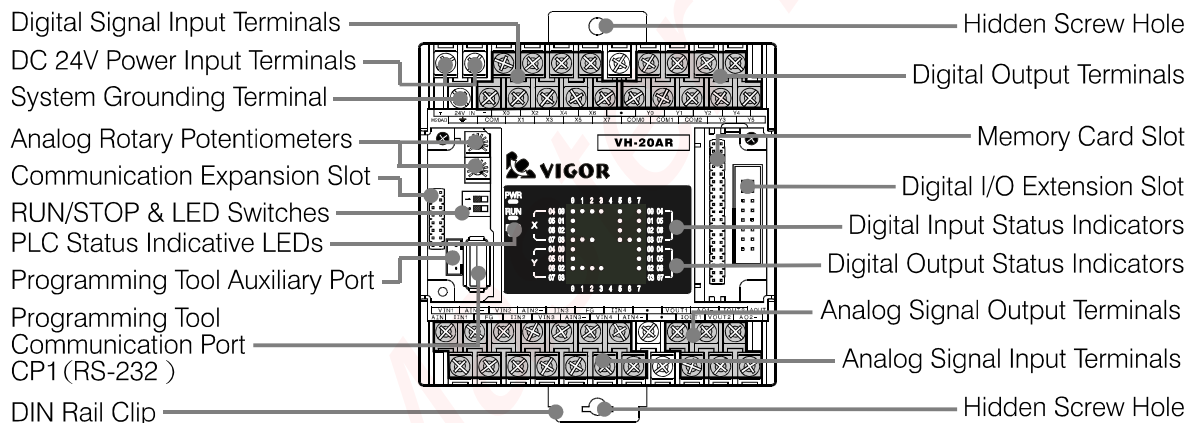

- The Programming Tool Communication Port (CP1, a USB A-type outlet) is using the RS-232 interface, that can not be directly connected with any equipment's USB port.
- Please use a VBUSB-200 adapter to connect between a PLC's Programming Tool Communication Port (CP1) and computer's USB port.
- Please use a MWPC-200 cable to connect between a PLC's Programming Tool Communication Port (CP1) and computer's RS-232 (Serial) port.
- Usually, the Programming Tool Auxiliary Port (JST 4P outlet) is for connecting with a HMI or SCADA. The circuit of Programming Tool Auxiliary Port and Programming Tool Communication Port are parallel, either one of them can be use at same time.
- PLC Status Indicative LED

LED	Status	Comment
PWR (GREEN)	ON	Power in Supply
	OFF	Power Failure
RUN (GREEN)	ON	RUN
	OFF	STOP
ERR (RED)	ON	PLC System Error (Stop Running)
	Blinking	Abnormal State (Stop Running)
	OFF	Normal

- RUN/STOP & Indicating Section Switches



Number	Function	OFF	ON
1	RUN/STOP Switch	STOP	RUN
2	I/O Indicating Range Switch	X0 ~ X37, Y0 ~ Y37	X40 ~ X77, Y40 ~ Y77

C-2 VH-20AR Specification


C-2-1 Performance Specification

Item		Specifications	
Operation Control Method		Cyclic Operation by Stored Program	
Programming Language Method		Electric Ladder Diagram + SFC	
I/O Control Method		Batch Processing	
Operation Processing Time	Basic Instruction	0.375 ~ 12.56 μ s	
	Applied Instruction	Several μ s ~ Several 100 μ s	
Number of Instructions	Basic Instructions	27 (including: LDP,LDF, ANDP, ANDF, ORP, ORF and INV)	
	Stepladder Instructions	2	
	Applied Instructions	81	
Operation Memory Capacity (Flash ROM)	Program Capacity	Built-in 4 K Steps Flash ROM	
	Comment Capacity	2730 comments (16 words or 8 double-words for each comment)	
	Program Comment Capacity	20,000 words or 10,000 double-words	
Max. Input / Output Points		128 points: X0 ~ X77, Y0 ~ Y77	
Internal Relay	Auxiliary Relay (M)	General	384 points: M0 ~ M383
		Latched	128 points: M384 ~ M511
		Special	256 points: M9000 ~ M9255
	State Relay (S)	Initial	10 points: S0 ~ S9 (Latched)
Latched		118 points: S10 ~ S127	
Timer (T)	100ms.		63 points: T0 ~ T62 (Timer range: 0.1 ~ 3276.7 sec.)
	10ms.		31 points: T32 ~ T62 (When M9028 = "ON" Timer range: 0.01 ~ 327.67 sec.)
	1 ms.		1 points: T63 (Timer range: 0.001 ~ 32.767 sec.)
Counter (C)	16-bit Up	General	16 points: C0 ~ C15
		Latched	16 points: C16 ~ C31
High Speed Counter (C)	32-bit Bi-directional, Latched	1-phase Counter	11 points: C235 ~ C245 (Signal Frequency: 10 KHz Max.)
		2-phase Counter	5 points: C246 ~ C250 (Signal Frequency: 10 KHz Max.)
		A/B Phase Counter	4 points: C251 ~ C254 (Signal Frequency: 5 KHz Max.)
Data Register (D)	General		128 points: D0 ~ D127
	Latched		128 points: D128 ~ D255
	Special		256 points: D9000 ~ D9255
	Index		16 points: V0 ~ V7, Z0 ~ Z7
Pointer	Call Pointer (P)		64 points: P0 ~ P63
	Interrupt Pointer (I)		15 points: 6 points for external interrupt, 3 points for timer interrupt, and 6 points for counter interrupt
	Nest Pointer (N)		8 points: N0 ~ N7
Range of Constants	Decimal (K)	16 Bits	-32768 ~ 32767
		32 Bits	-2147483648 ~ 2147483647
	Hexadecimal (H)	16 Bits	0H ~ FFFFH
		32 Bits	0H ~ FFFFFFFFH
Pulse Output		1 point; Max. 7 KHz	
Programming Device Link Interface CP1		RS-232C, for direct connect with a computer, HMI or MODEM	
Communication Link Interface CP2 (Optional)		RS-232C or RS-422 / RS-485, for connect with a computer or HMI	
Communication Link Interface CP3 (Optional)		RS-485, for direct connect with a computer HMI	
Real Time Clock (Optional)		To indicates year, month, day, hour, min., sec. and week	
Error Code Display Function		Displays 109 error codes (01~99 or E0~E9)	
Analog Potentiometer		2 Analog Rotary Potentiometers, for values input (0 ~ 255 or 0 ~ 10)	
Main Unit Built-in I/O		Digital Input	8 Points, X0 ~ X7
		Digital Output	6 Points, Y0 ~ Y5
		Analog Input	4 Points, 12 bit resolution, $\pm 10V / 4 \sim 20mA / \pm 20mA$
		Analog Output	2 Points, 12 bit resolution, $\pm 10V / 4 \sim 20mA / \pm 20mA$


C-2-2 Power Specification

Item	Specifications
Power Input Require	DC24V, +20% / -15%
Input Frequency	—
Momentary Power Failure	Keep working at least 1 ms.
Power Fuse	250V; 0.5A
Power Consumption	5W (Main Unit Only)
Power Unit Output Current (Inner)	DC5V; 400mA
	DC12V; 530mA

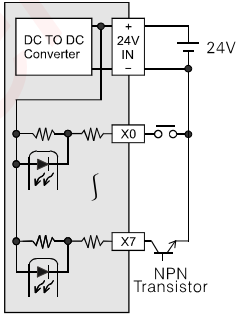C-2-3 Digital Input Specification

Item	Specifications
Power Input Require	DC24V, $\pm 15\%$
Input Signal Circuit	7mA / DC24V
Input ON Circuit	Above 3.5 mA
Input OFF Circuit	Below 1.7 mA
Input Resistance	3.3 k Ω approximately
Input Response Time	10 ms. approximately (X0 ~ X7 are variable, can be set between 0 ~ 15 ms.)
Input Signal Type	Dry Contact or NPN open collector transistor
Isolation Method	Photocoupler Isolation
Circuit Diagram	 <p>The diagram shows a power supply section with a 'DC TO DC Converter' and a '24V IN' terminal connected to a '24V' source. Two input channels are shown: 'X0' and 'X7'. Each channel consists of a resistor in series with a terminal. The 'X7' channel is connected to an 'NPN Transistor'.</p>

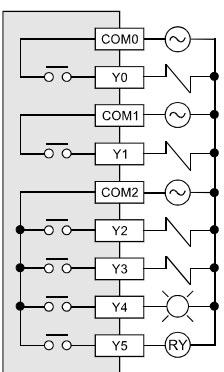
C-2-4 Digital Output Specification

Item	Specifications	
Output Type	Relay Output	
Switched Voltages	\leq AC 250V / DC 30V	
Rated Current	Resistive Load	2 A / point
	Inductive Load	80VA
	Lamp Load	100W
Open Circuit Leakage	—	
Response Time	10 ms. approximately	
Isolation Method	Mechanic Isolation (Relay)	
Circuit Diagram	 <p>The diagram shows three common terminals labeled 'COM0', 'COM1', and 'COM2', each with a corresponding common terminal symbol. Five output points are shown: 'Y0', 'Y1', 'Y2', 'Y3', and 'Y4' are connected to lamps, and 'Y5' is connected to a relay labeled 'RY'.</p>	

C-2-5 Analog Input Specification

Item	Voltage Input	Current Input
	Voltage or Current Signal Inputs are Designated by D9090 and Different Terminals	
Analog Input Range	-10V ~ +10V	4 ~ 20mA / -20mA ~ +20mA
Digital Output Range	-2000 ~ +2000	0 ~ 2000 / -2000 ~ +2000
Input Resistance	200K Ω	250 Ω
Resolution	5mV	20 μ A
Overall Accuracy	$\pm 1\%$ (Max.)	
Conversion Speed	Data refresh at every Scan Time	
Isolation Method	Magnetic-coupler isolation between PLC and inputs; no isolation between analog input channels	
Max. Sustainable Input Range	± 15 V	± 32 mA


Curve diagram of A/D conversion characteristics

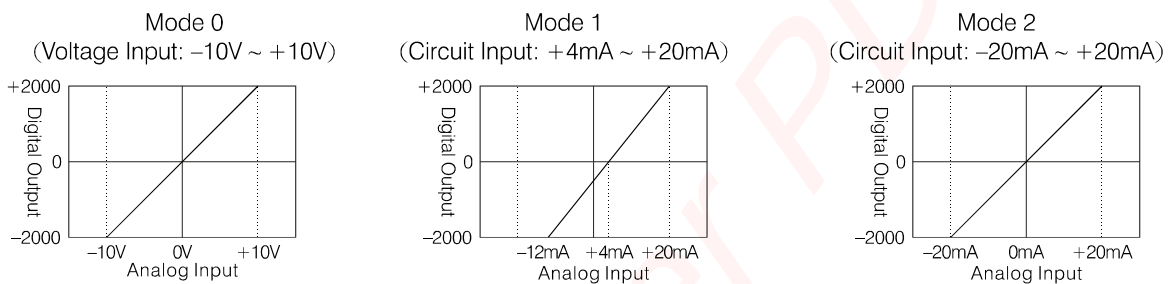

C-2-6 Analog Output Specification

Item	Voltage Output	Current Output
	Voltage or Current Signal Outputs are Designated by D9095 and Different Terminals	
Analog Output Range	-10V ~ +10V	4 ~ 20mA / -20mA ~ +20mA
Digital Input Range	-2000 ~ +2000	0 ~ 2000 / -2000 ~ +2000
External Loading Resistance	500 Ω ~ 1M Ω	Under 500 Ω
Resolution	5mV	10 μ A
Overall Accuracy	$\pm 2\%$ (Max.)	
Conversion Speed	Data refresh at every Scan Time	
Isolation Method	Magnetic-coupler isolation between PLC and outputs; no isolation between analog output channels	


Curve diagram of D/A conversion characteristics

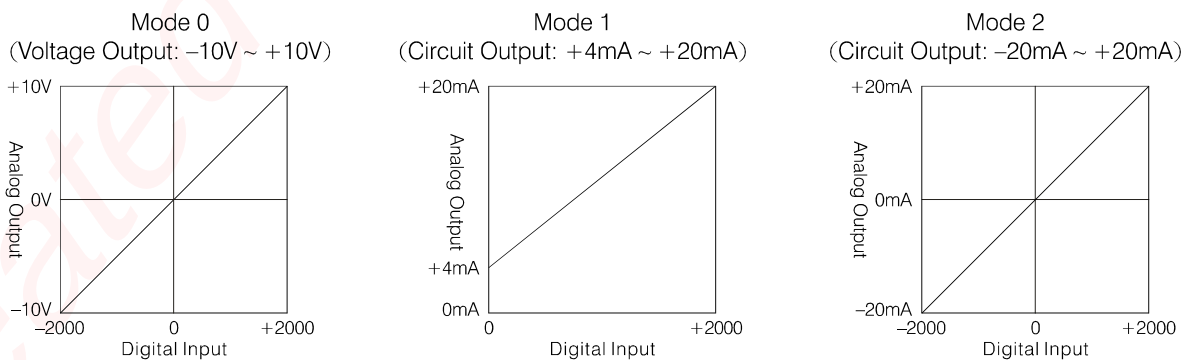

C-3 Installation

C-3-1 Installation Guides

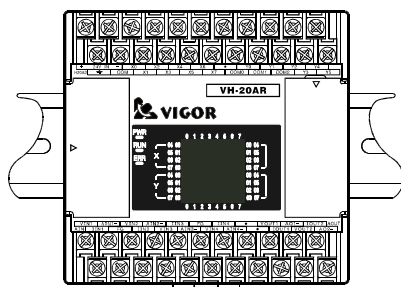
- Din Rail Installation



DIN Rail Clip


Install the PLC on a 35mm standard DIN rail; Pull the clip down can remove.

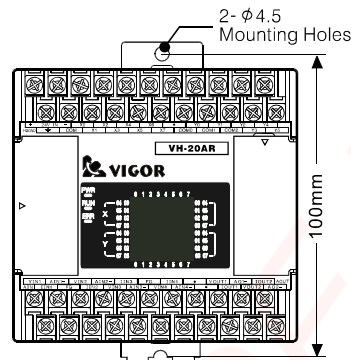- Direct Screws Installation




Pull out the hidden mounting holes (100mm distance) from the top and bottom of the PLC and install with screws.

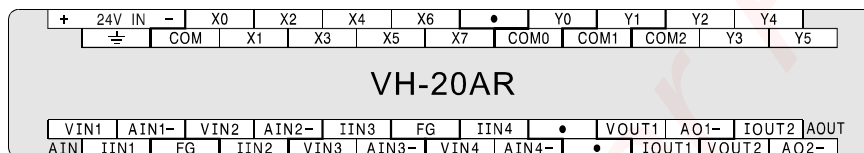C-3-2 Terminal Layouts



C-3-3 External Wiring

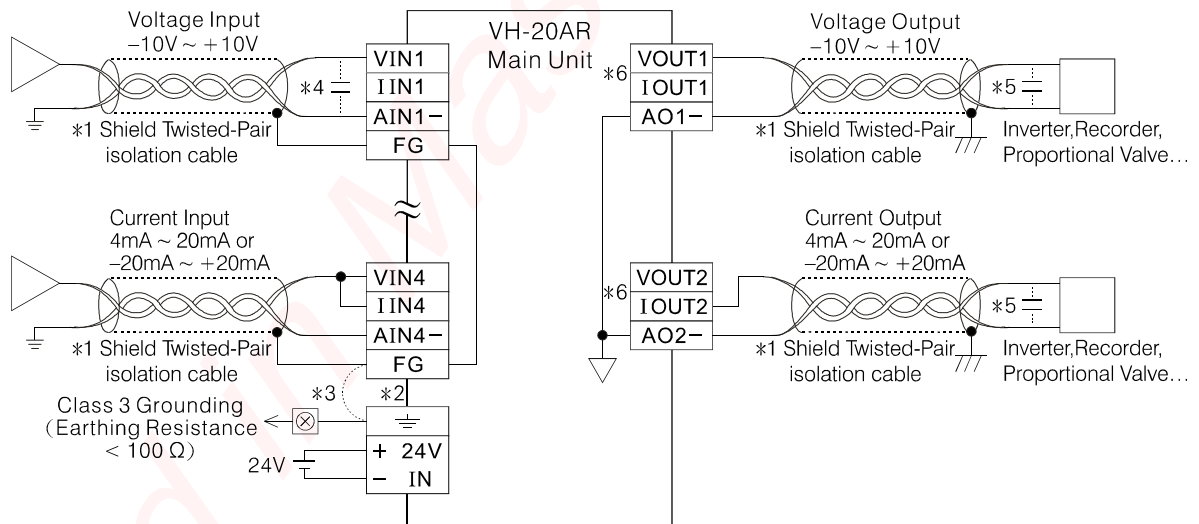

- *1 : Please use the Shield Twisted-Pair isolation cable for each analog input and output channel, and keep the cable away from the electromagnetic interference source (ex. power lines or any other lines which may induce electrical noise). Apply 1-point grounding at the load side of the output cable (Class 3 Grounding: Earthing Resistance < 100 Ω).
- *2 : Connect the ≡ terminal to the grounding point and use the Class 3 Grounding for the system or connect it to the rack of distribution board.
- *3 : If there is excessive electrical noise, connect the FG frame ground terminal with the ≡ terminal.
- *4 : If a voltage ripple occurs during input or there is electrically induced noise on the external wiring, please parallel connection a smoothing capacitor (0.1 ~ 0.47 μF, 25 V) between the input terminals.
- *5 : If electrical noise or a voltage ripple exists at the output signal to loader, please parallel connection a smoothing capacitor (0.1 ~ 0.47 μF, 25 V) between the input terminals of loader.
- *6 : Use both (voltage and current) outputs from a channel is not allow.

C-4 Operating Instruction

Special data registers list for analog functions. They are not latched registers.

Register #	Special data registers list for analog functions. They are not latched registers.	
D9090	To organize the input modes of AIN1 ~ AIN4	
D9091	Averaged input value from AIN1	<ul style="list-style-type: none"> Data values refresh at every Scan Time. The contain values of D9091 ~ D9094 are averaged of 8 sampling times.
D9092	Averaged input value from AIN2	
D9093	Averaged input value from AIN3	
D9094	Averaged input value from AIN4	
D9095	To organize the output modes of AO1 and AO2	
D9096	Digital value for AO1 output	<ul style="list-style-type: none"> Analog outputs refresh at every Scan Time. The digital value of analog outputs will be reset when the PLC "STOP"
D9097	Digital value for AO2 output	

- For 4 analog value inputs, the value of D9090 switches the modes between voltage or current analog input on each channel. The D9090 uses a format of 4-digit hexadecimal number. The first hexadecimal digit will be the command for AIN1, and the second digit is for AIN2, and so forth. The numeric value of each digit respectively represent the following definitions:
 If the value of digit = 0 : Sets the channel to voltage input mode (-10 V ~ +10 V).
 If the value of digit = 1 : Sets the channel to current input mode (+4 mA ~ +20 mA).
 If the value of digit = 2 : Sets the channel to current input mode (-20 mA ~ +20 mA).
 If the value of digit = 3 : Disables the channel.

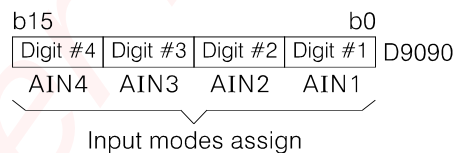
Example: Let the D9090 = H3210

AIN1 = 0 : Voltage output (-10 V ~ +10 V)

AIN2 = 1 : Current output (+4 mA ~ +20 mA)

AIN3 = 2 : Current output (-20 mA ~ +20 mA)

AIN4 = 3 : Disabled.




- For 2 analog outputs, the value of D9095 switches the modes between voltage or current analog output on each channel. The D9095 uses a format of 2-digit hexadecimal number. The first hexadecimal digit will be the command for AO1, and the second digit is for Ao2. The numeric value of each digit respectively represent the following definitions:
 If the value of digit = 0 : Sets the channel to voltage output mode (-10 V ~ +10 V).
 If the value of digit = 1 : Sets the channel to current output mode (+4 mA ~ +20 mA).
 If the value of digit = 2 : Sets the channel to current output mode (-20 mA ~ +20 mA).
 If the value of digit = 3 : Disables the channel.


Example: Let the D9095 = H10

AO1 = 0 : Voltage output (-10 V ~ +10 V)

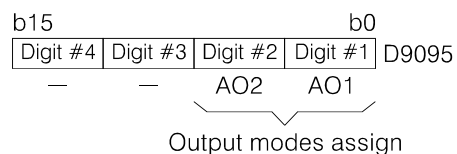AO2 = 1 : Current output (+4 mA ~ +20 mA)



Example Program

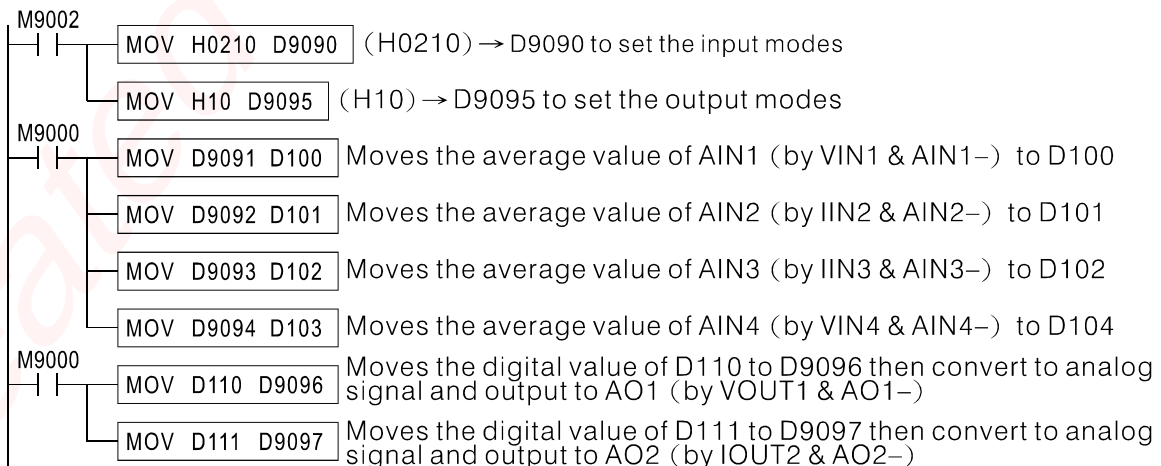


VH-20AR


VH-20AR نه تنها همه توابع PLC های سری VH را دارد بلکه علاوه بر آن ۴ کانال آنالوگ ورودی و ۲ کانال آنالوگ خروجی نیز دارد.

۱. مشخصات اجزا و اندازه ها

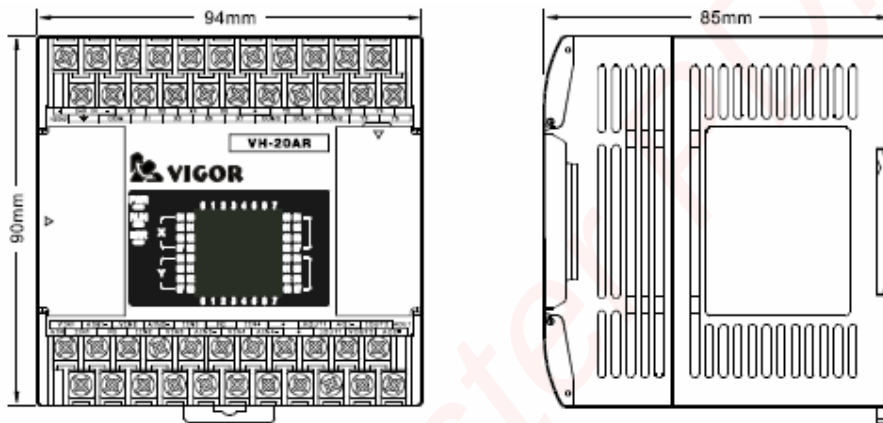۱-۱ اندازه ها



۲ - ۱ مشخصات اجزا

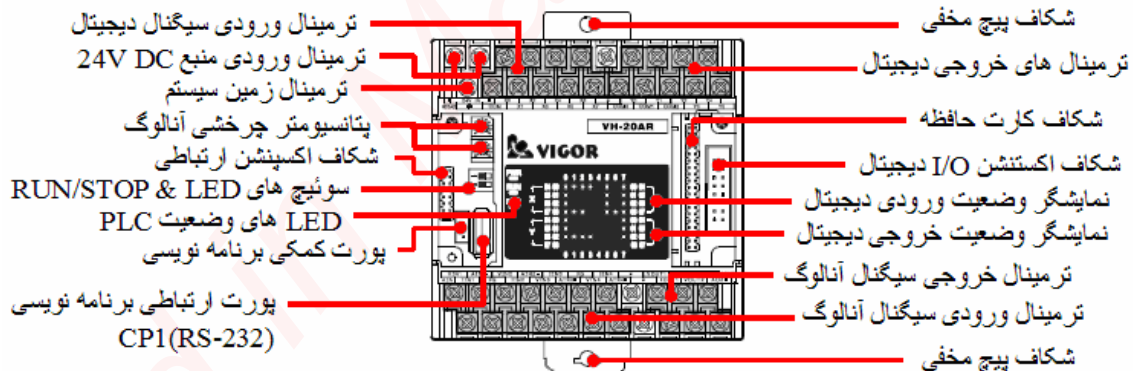


- پورت ارتباطی برنامه نویسی (CP1 , USB نوع A-) از RS-232 استفاده می کند که نمی تواند به طور مستقیم به پورت USB متصل شود.
- برای اتصال بین پورت ارتباطی برنامه نویسی PLC (CP1) و پورت USB کامپیوتر باید از آداپتور VBUSB-200 استفاده کرد.
- برای اتصال بین پورت ارتباطی برنامه نویسی PLC (CP1) و پورت USB(سریال) RS-232 کامپیوتر باید از کابل MWPC-200 استفاده کرد.

- معمولا پورت کمکی برنامه نویسی (JST 4P) برای اتصال با HMI یا SCADA استفاده می شود. مدار پورت کمکی برنامه نویسی و پورت ارتباطی برنامه نویسی موازی هستند . به این معنی که نمی تواند در یک زمان هم به HMI اتصال یابد و هم به پورت برنامه نویسی .
- LED نمایشگر وضعیت PLC

LED	وضعیت	توضیح
PWR (سبز)	ON	منبع تغذیه وصل می باشد
	OFF	منبع تغذیه قطع می باشد
RUN (سبز)	ON	RUN
	OFF	STOP
ERR (قرمز)	ON	خطا سیستم PLC (Stop Running)
	چشمک زن	وضعیت غیر نرمال (Stop Running)
	OFF	نرمال

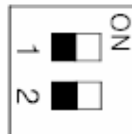- سوئیچ های قسمت نمایش و RUN/STOP



شماره	تابع	OFF	ON
۱	سوئیچ RUN/ STOP	STOP	RUN
۲	سوئیچ نمایش I/O	X30~X37, Y0~Y37	X40~X77, Y40~Y77

Item		ویژگی ها	
روش کنترل عملکرد		سیکل اجرایی برنامه ذخیره شده	
زبان برنامه نویسی		SFC + Ladder	
روش کنترل I/O		پردازش دسته ای	
زمان اجرا	دستور اصلی	0.375 ~ 12.56 μ s	
	دستورات بعدی	چندین 100 μ s ~ چندین μ s	
تعداد دستورات	دستورات اصلی	۲۷ شامل: (LDP, LDF, ANDP, ANDF, ORP, ORF, INV)	
	Ladder دستورات	2	
	دستورات بعدی	81	
ظرفیت حافظه اجرایی (Flash ROM)	ظرفیت برنامه	Flash ROM 4K مرحله	
	ظرفیت توضیحات	۲۷۳۰ توضیح (۱۶ کلمه یا ۸ عبارت (دو-کلمه) برای هر توضیح)	
	ظرفیت توضیحات برنامه	10,000 یا 20,000 کلمه	
ماکزیمم نقاط ورودی/ خروجی		۱۲۸ نقطه: X0 ~ X77, Y0 ~ Y77	
رله داخلی	رله کمکی (M)	عمومی	M0 ~ M383: نقطه: ۳۸۴
		Latched	M384 ~ M511: نقطه: ۱۲۸
		ویژه	M9000 ~ M9255: نقطه: ۲۵۶
	رله وضعیت (S)	راه اندازی	(Latched) S0 ~ S9: نقطه: ۱۰
		Latched	S10 ~ S127: نقطه: ۱۱۸
	تایمر (T)	100ms.	۶۳ نقطه: T0 ~ T62 (رنج تایمر: 0.1 ~ 3276.7 sec)
10ms.		۳۱ نقطه: T32 ~ T62 (زمانیکه "ON" = M9028 باشد، رنج تایمر: 0.01 ~ 327.67 sec)	

		1ms.	1 نقطه: T63 (رنج تایمر: 0.001 ~ 32.767 sec)
کانتر (C)	۱۶- بیت بالا	عمومی	۱۶ نقطه: C0 ~ C15
		Latched	۱۶ نقطه: C16 ~ C31
کانتر سرعت (C) بالا	۳۲ بیتی دو جهتی , Latched	کانتر فاز-۱	۱۱ نقطه: C235 ~ C245 (فرکانس سیگنال: ماکزیمم 10 KHz)
		کانتر فاز-۲	۵ نقطه: C246 ~ C250 (فرکانس سیگنال: ماکزیمم 10 KHz)
		کانتر فاز A/B	۴ نقطه: C251 ~ C254 (فرکانس سیگنال: ماکزیمم 5 KHz)
رجیستر داده (D)		عمومی	۱۲۸ نقطه: D0 ~ D127
		Latched	۱۲۸ نقطه: D128 ~ D255
		ویژه	۲۵۶ نقطه: D9000 ~ D9255
		Index	۱۶ نقطه: V0 ~ V7, Z0 ~ Z7
نقاط		نقطه فراخوانی (P)	۶۴ نقطه: P0 ~ P63
		نقطه وقفه (I)	۱۵ نقطه: ۶ نقطه برای وقفه خارجی, ۳ نقطه برای وقفه تایمر, و ۶ نقطه برای وقفه کانتر
		Nest (N)	۸ نقطه: N0 ~ N7
رنج محتوا	دسیمال (K)	۱۶ بیت	-32768 ~ 32768
		۳۲ بیت	-2147483648 ~ 2147483647
	هگزادسیمال (H)	۱۶ بیت	0H ~ FFFFH
		۳۲ بیت	0H ~ FFFFFFFFH
پالس خارجی			۱ نقطه; ماکزیمم 7KHz
ابزار برنامه نویسی مرتبط با CP1			RS-232C, برای اتصال مستقیم با کامپیوتر یا HMI
ابزار ارتباطی با CP2 (اختیاری)			RS-232C یا RS-422/ RS-485, برای اتصال با کامپیوتر یا HMI
ابزار ارتباطی با CP3 (اختیاری)			RS-485, برای اتصال مستقیم با کامپیوتر یا HMI
ساعت (اختیاری)			برای نمایش سال, ماه, روز, ساعت, دقیقه, ثانیه, و هفته

تابع نمایش کد خطا		نمایش ۱۰۹ کد خطا (E0 ~ E9 یا 01 ~ 99)
پتانسیومتر آنالوگ		۲ پتانسیومتر چرخشی آنالوگ، برای مقادیر ورودی (0 ~ 255) یا (0 ~ 10)
I/O واحد اصلی	ورودی دیجیتال	8 نقطه، X0 ~ X7
	خروجی دیجیتال	6 نقطه، Y0 ~ Y5
	ورودی آنالوگ	4 نقطه، رزولیشن ۱۲ بیت، $\pm 10V/4 \sim 20 \text{ mA} / \pm 20 \text{ mA}$
	خروجی آنالوگ	2 نقطه، رزولیشن ۱۲ بیت، $\pm 10V/4 \sim 20 \text{ mA} / \pm 20 \text{ mA}$

۲-۲ ویژگی های منبع تغذیه

Item	ویژگی ها
تغذیه داخلی مورد نیاز	DC 24V , +20% /-15%
فرکانس داخلی	-
خطای زودگذر منبع	حداقل 1ms کار می کند.
فیوز منبع	250V; 0.5A
مصرف تغذیه	5W (فقط واحد اصلی)
جریان خارجی منبع	DC 5V; 400mA
	DC 12V; 530mA


۳-۲ ویژگی های ورودی دیجیتال

Item	ویژگی ها
تغذیه داخلی مورد نیاز	DC 24V, $\pm 15\%$
مدار سیگنال ورودی	7mA / DC 24V
مدار ورودی ON	بالاتر از 3.5mA

مدار ورودی OFF	کمتر از 1.7mA
مقاومت داخلی	حدودا ۳,۳ KΩ
زمان پاسخ گویی ورودی	حدودا 10 ms (X0 ~ X7) متغییر هستند, که می توانند بین 0 ~ 15ms تنظیم شوند.
نوع سیگنال ورودی	Dry Contact یا ترانزیستور کلکتور باز NPN
روش ایزولاسیون	اپتوکوپلر ایزولاسیون
دیگرام مدار	

۴-۲ ویژگی های خروجی دیجیتال

Item	ویژگی ها	
نوع خروجی	رله خروجی	
ولتاژهای سوئیچ	≤ AC 250V/ DC 30V	
جریان مجاز	بار مقاومتی	2 A
	بار قیاسی	80VA
	بار لامپ	100W
نشستی مدار باز	-	
زمان پاسخ گویی	حدودا 10 ms	

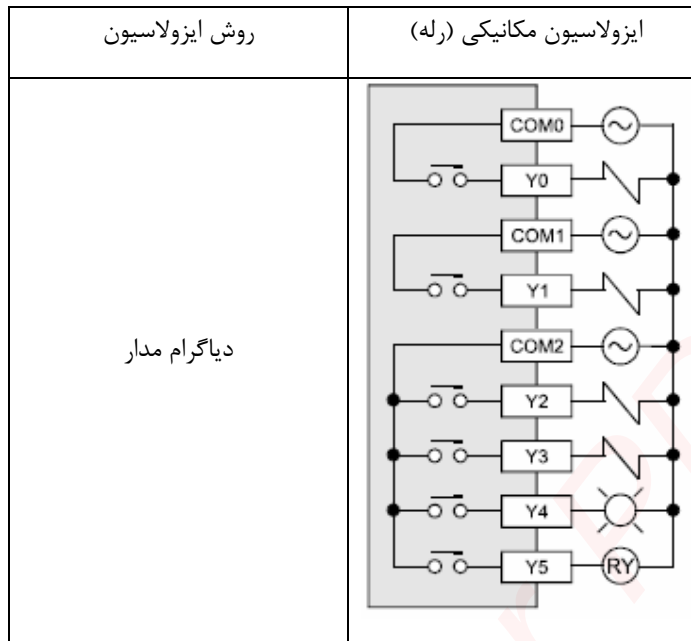




۲-۵ ویژگی های ورودی آنالوگ:

با وارد کردن ورودی آنالوگ به VH-20AR می توان خروجی دیجیتال دریافت کرد.

در جدول زیر ویژگی های ورودی آنالوگ و رنج مجاز ورودی آورده شده است، که خروجی دیجیتال متناسب با آن در خروجی تولید می شود.

	ولتاژ ورودی	جریان ورودی
	ولتاژ یا جریان ورودی (توسط D9090 به ترمینال های مختلف تنظیم می شود).	
رنج ورودی آنالوگ	-10V ~ +10V	4 ~ 20mA / -20mA ~ +20mA
رنج خروجی دیجیتال	-2000 ~ +2000	0 ~ 2000 / -2000 ~ +2000
مقاومت ورودی	200K Ω	250 Ω
رزولیشن	5mV	
دقت	±1% (Max.)	
سرعت تبدیل	داده ها در هر سیکل اسکن رفرش می شوند.	
روش ایزوله کردن	بین PLC و ورودی ها اپتوکوپلر مغناطیسی ایزولاسیون وجود دارد؛ بین کانال های ورودی آنالوگ ایزوله نیست.	
رنج ماکزیمم ورودی ثابت	±15V	±32 mA

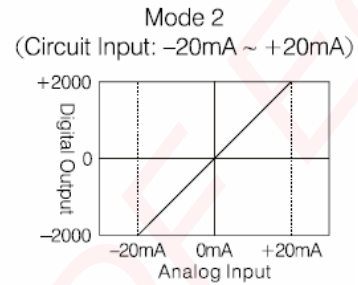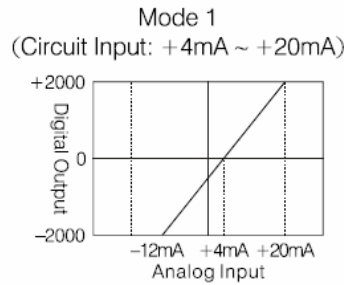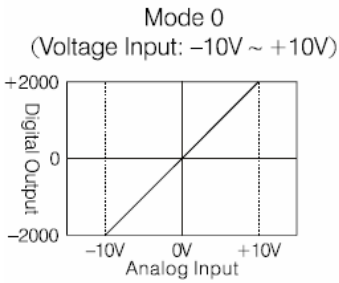دیاگرام منحنی تبدیل A/D






ویژگی های خروجی آنالوگ:

با وارد کردن ورودی دیجیتال به VH-20AR می توان خروجی آنالوگ دریافت کرد.

در جدول زیر ویژگی های خروجی آنالوگ و رنج خروجی آورده شده است، که خروجی آنالوگ متناسب با ورودی دیجیتال وارد شده در پورت خروجی تولید می شود.


	ولتاژ خروجی	جریان خروجی
	ولتاژ یا جریان خروجی (توسط D9095 به ترمینال های مختلف تنظیم می شود.)	
رنج خروجی آنالوگ	$-10V \sim +10V$	$4 \sim 20mA / -20mA \sim +20mA$
رنج ورودی دیجیتال	$-2000 \sim +2000$	$0 \sim 2000 / -2000 \sim +2000$
مقاومت خروجی	$500\Omega \sim 1M\Omega$	زیر 500Ω
رزولیشن	$5mV$	$10\mu A$
دقت	$\pm 2\% (Max.)$	
سرعت تبدیل	داده ها در هر سیکل اسکن رفرش می شوند.	
روش ایزوله کردن	بین PLC و خروجی ها اپتوکوپلر مغناطیسی ایزولاسیون وجود دارد؛ بین کانال های خروجی آنالوگ ایزوله نیست.	

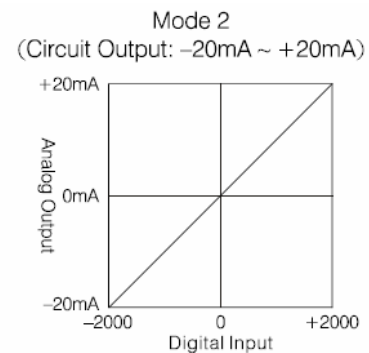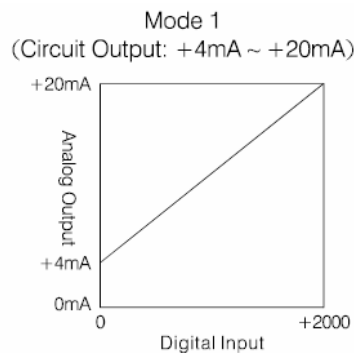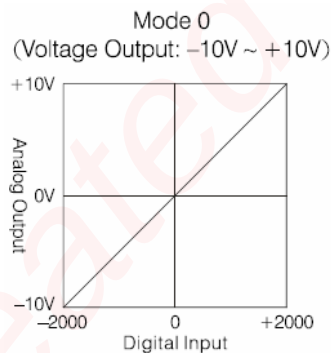دیاگرام منحنی تبدیل D/A



۳. نصب

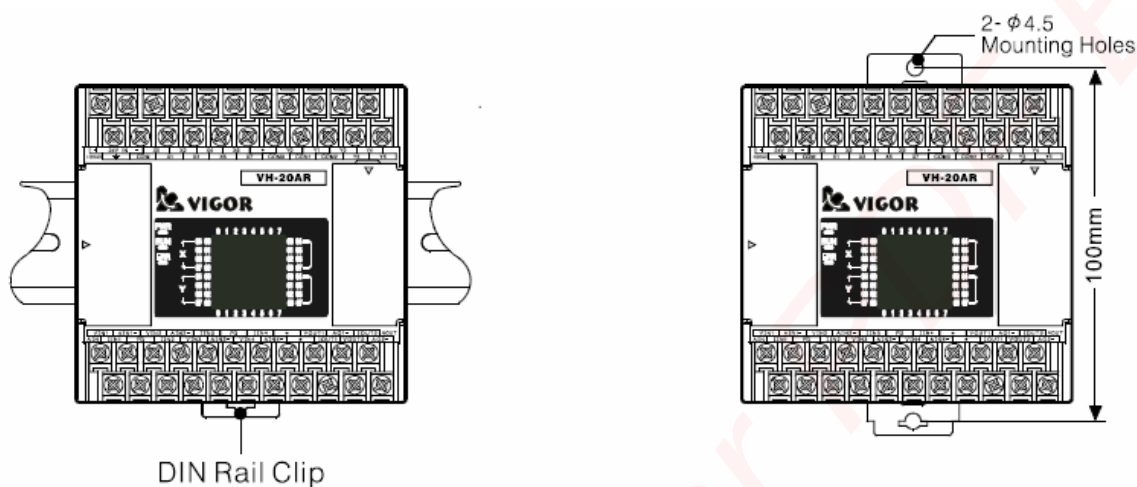۳-۱ راهنمای نصب



۳-۲ طرح ترمینال ها

VH-20AR													
+	24V IN	-	X0	X2	X4	X6	•	Y0	Y1	Y2	Y4		
⊥	COM		X1	X3	X5	X7	COM0	COM1	COM2	Y3	Y5		
VIN1	AIN1-	VIN2	AIN2-	IIN3	FG	IIN4	•	VOUT1	AO1-	IOUT2	AOUT		
AIN	IIN1	FG	IIN2	VIN3	AIN3-	VIN4	AIN4-	•	IOUT1	VOUT2	AO2-		

۳-۳ سیم کشی خارجی

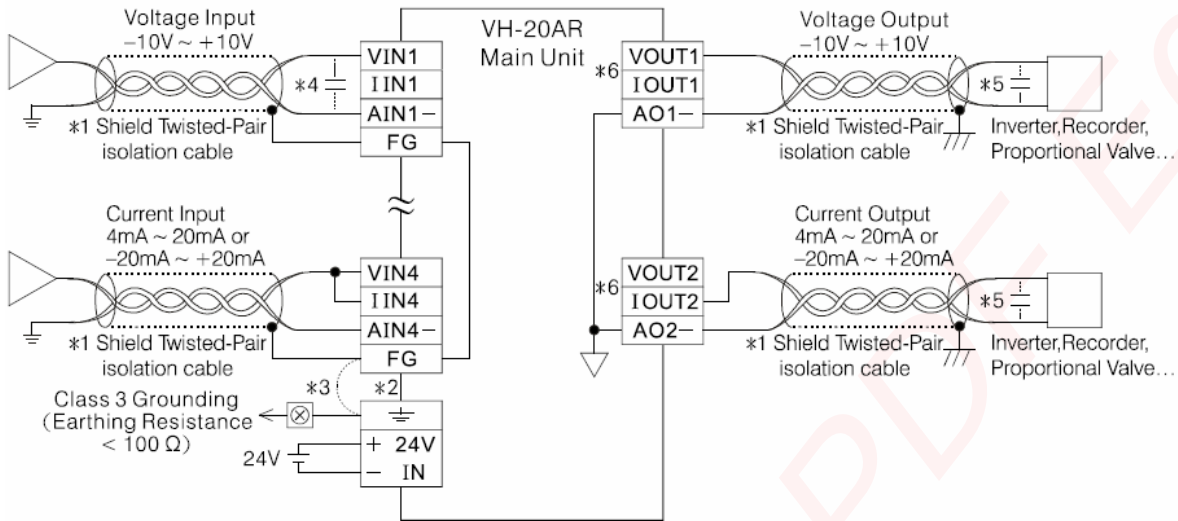
در شکل زیر نحوه سیم کشی و اتصال به VH-20AR نشان داده شده است.

در ورودی ۱ آنالوگ نحوه سیم کشی برای اعمال ولتاژ آنالوگ نشان داده شده است. که مقدار ولتاژ خروجی دیجیتال آن ، در رجیستر D9091 ذخیره می شود.

در ورودی ۴ آنالوگ نحوه سیم کشی برای اعمال جریان آنالوگ نشان داده شده است. که مقدار جریان خروجی دیجیتال آن، در رجیستر D9094 ذخیره می شود.

با وارد کردن مقدار ولتاژ دیجیتال به رجیستر D9096 می توان ولتاژ خروجی آنالوگ متناظر با آن را از خروجی ۱ آنالوگ دریافت کرد، که نحوه سیم کشی آن در شکل نشان داده شده است.

با وارد کردن مقدار جریان دیجیتال به رجیستر D9097 می توان جریان خروجی آنالوگ متناظر با آن را از خروجی ۲ آنالوگ دریافت کرد، که نحوه سیم کشی آن در شکل نشان داده شده است.



*۱: از کابل ایزوله زوج سیم به هم پیچیده شیلد برای هر کانال ورودی و خروجی آنالوگ استفاده شود، و کابل دور از منبع الکترومغناطیسی قرار گیرد. (مثلا خطوط توان یا سایر خطوط که مبدل نویز الکتریکی هستند). در قسمت بار کابل خروجی یک نقطه زمین شود (زمین کلاس ۳: مقاومت زمین $< 100\Omega$).

*۲: ترمینال \equiv به زمین متصل می شود و برای سیستم از زمین کلاس ۳ استفاده می شود و یا به ردیف برد توضیح متصل می گردد.

*۳: اگر نویز الکتریکی زیاد باشد، ترمینال زمین فریم FG به ترمینال \equiv متصل می شود.

*۴: اگر در ورودی ریپل ولتاژ رخ دهد یا سیم کشی خارجی نویز الکتریکی تولید کند، باید یک خازن نرم ($0.1 \sim 0.47\mu F$, $25V$) بین ترمینال های ورودی به طور موازی متصل کرد.

*۵: اگر نویز الکتریکی یا ریپل ولتاژ در سیگنال خارجی بار وجود داشته باشد، باید یک خازن نرم ($0.1 \sim 0.47\mu F$, $25V$) بین ترمینال های ورودی بار به طور موازی متصل کرد.

نحوه اعمال جریان و ولتاژ آنالوگ:

به طور مثال برای اعمال جریان به ورودی آنالوگ می توان از یک پتانسیومتر که به طور سری با یک منبع تغذیه بسته شده است به پورت ورودی آنالوگ جریان آنالوگ وارد کرد.

به همین ترتیب با اتصال موازی پتانسیومتر با منبع تغذیه می توان به پورت ورودی آنالوگ ولتاژ اعمال کرد.

باید توجه داشت که جریان و ولتاژ آنالوگ وارده از رنج مجاز خارج نشود.


برای اندازه گیری جریان و ولتاژ آنالوگ خروجی نیز می توان از مولتی متر استفاده کرد.

۴. دستور اجرایی

رجیسترهای ویژه برای توابع آنالوگ در زیر آمده است.

رجیستر	رجیسترهای ویژه توابع آنالوگ	
D9090	برای تعیین مد ورودی AIN1 ~ AIN4	
D9091	مقدار ورودی AIN1	• داده ها در هر سیکل اسکن رفرش می شوند.
D9092	مقدار ورودی AIN2	
D9093	مقدار ورودی AIN3	
D9094	مقدار ورودی AIN4	
D9095	برای تنظیم مد خروجی AO1 ~ AO2	
D9096	مقدار خروجی دیجیتال AO1	• داده ها در هر سیکل اسکن رفرش می شوند.
D9097	مقدار خروجی دیجیتال AO2	

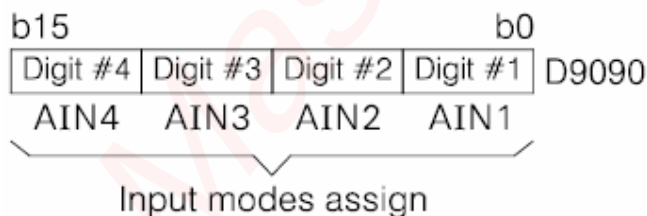- در D9090 یک مقدار با ۴ رقم ریخته می شود که رقم اول ورودی آنالوگ ۱ را تنظیم می کند، رقم دوم ورودی آنالوگ ۲، رقم سوم ورودی آنالوگ ۳، رقم چهارم ورودی آنالوگ ۴ را تنظیم می کند. در این رجیستر می توان مد ورودی جریان یا ولتاژ و رنج مجاز ورودی را تنظیم کرد.



مقدار = ۰ : تنظیم کانال به مد ورودی ولتاژ (-10V ~ +10V)

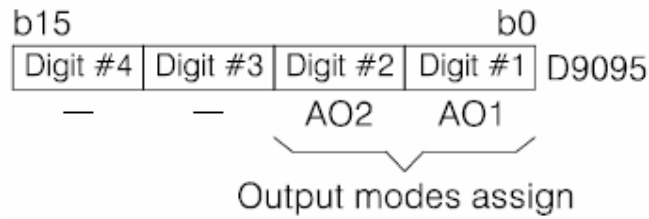
مقدار = ۱ : تنظیم کانال به مد ورودی جریان (+4mA ~ +20mA)

مقدار = ۲ : تنظیم کانال به مد ورودی جریان (-20mA ~ +20mA)

مقدار = ۳ : کانال غیر فعال

- در D9095 یک مقدار با ۲ رقم ریخته می شود که رقم اول خروجی آنالوگ ۱، رقم دوم خروجی آنالوگ ۲ را تنظیم می کند.

در این رجیستر می توان مد خروجی جریان یا ولتاژ و رنج مجاز خروجی را تنظیم کرد.



مقدار = ۰ : تنظیم کانال به مد خروجی ولتاژ (-10V ~ +10V)

مقدار = ۱ : تنظیم کانال به مد خروجی جریان (+4mA ~ +20mA)

مقدار = ۲ : تنظیم کانال به مد خروجی جریان (-20mA ~ +20mA)

مقدار = ۳ : کانال غیر فعال

مثال از یک برنامه:

در مثال زیر مقدار H0210 در رجیستر D9090 ریخته شده است که مد ورودی را به صورت زیر تنظیم می کند:

ورودی = ۱ = ۰ : مد ورودی ولتاژ (-10V ~ +10V)

ورودی = ۲ = 1 : مد ورودی جریان (+4mA ~ +20mA)

ورودی = ۳ = 2 : مد ورودی جریان (-20mA ~ +20mA)

ورودی = ۴ = ۰ : مد ورودی ولتاژ (-10V ~ +10V)

مقدار خروجی دیجیتال متناظر با این ۴ کانال به ترتیب در رجیسترهای D9094, D9093, D9092, D9091 ریخته می شود.

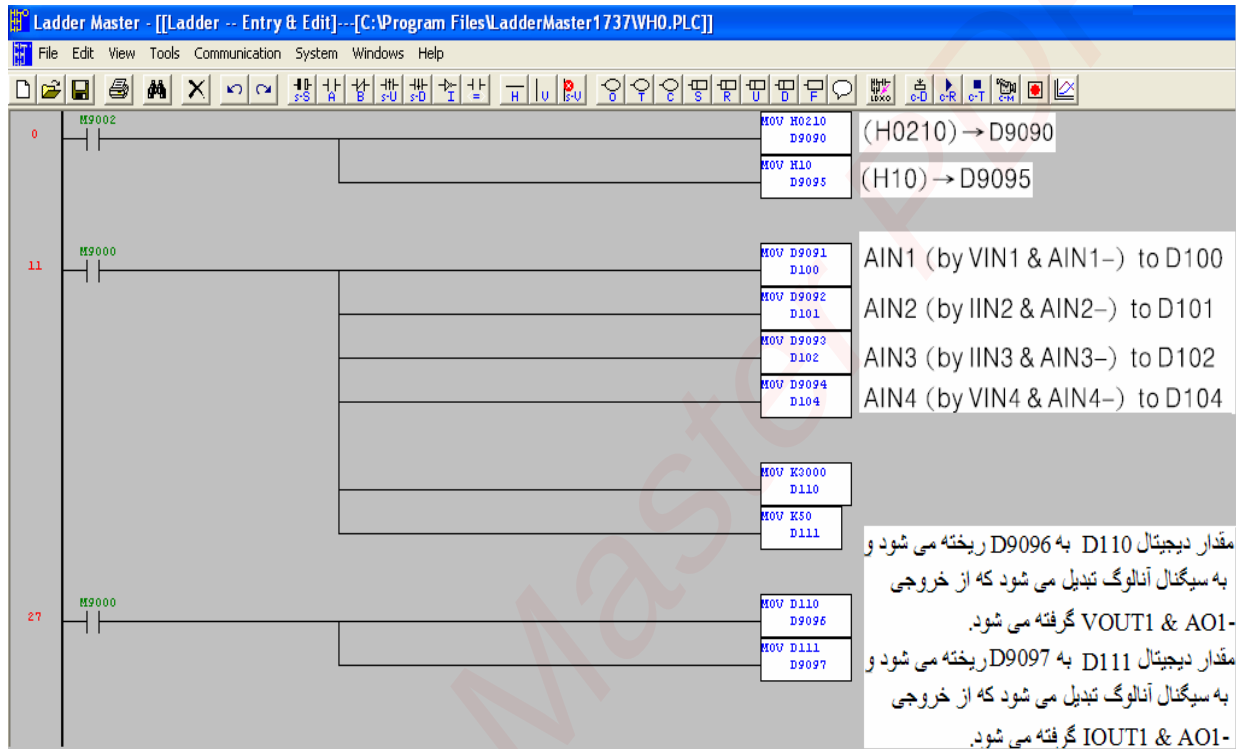
همچنین مقدار H10 در رجیستر D9095 ریخته شده است که مد خروجی را به صورت زیر تنظیم می کند:

خروجی = ۱ = ۰ : مد خروجی ولتاژ (-10V ~ +10V)

خروجی = ۲ = 1 : خروجی جریان (+4mA ~ +20mA)

مقدار ولتاژ دیجیتال در رجیستر D9096 ریخته می شود و خروجی آنالوگ متناظر با آن از خروجی آنالوگ ۱ دریافت می شود.

مقدار جریان دیجیتال در رجیستر D9097 ریخته می شود و خروجی آنالوگ متناظر با آن از خروجی آنالوگ 2 دریافت می شود.



Safety Notes

Please Read Before Use

This manual should be read and understood before attempting to install, operate, maintain or overhaul a PLC. The user should be completely familiar with all associated documentation, safety practices, guidelines and necessary device knowledge before move on accordingly.

Two symbols are used to highlight the safety notes mentioned in this manual: DANGER and CAUTION. They are listed below with brief descriptions.



 
DANGER

Indicates that misoperation could cause severe consequence like death or major injury.



CAUTION

Indicates that misoperation could cause physical or property damage.


In addition, the  CAUTION warnings also indicate that severe consequences are possible under certain conditions. Please make sure all operations are carried out in accordance with these guidelines to avoid such consequences.

Please keep this manual properly for reference whenever necessary and distribute it to the end users.

Safety Notes

Please Read Before Use


1. Design Guidelines

 DANGER	Page Ref.
<ul style="list-style-type: none">• Please set up an external safety circuit for the PLC, so that if the external power fails or the PLC breaks down, the system can still operate with safety.• Any misoperation or mis-output could possibly cause accident.• External protective circuits should be designed for a PLC to avoid mechanical damage. E.g. Emergency Stop, Forward/Reverse Inter-Lock or Upper/Lower Limit Positioning.• A PLC CPU detects abnormal states through self-examine functions such as Watch Dog Timer (WDT) and will then switch off all its outputs. Anyway, it is not able to detect the state of the input/output control circuits and thus may not be able to control the output when error occurs. So in order to protect the mechanical equipment, some external safety circuits and agencies should be designed.• A PLC may not be able to control the ON/OFF state when error occurs to its output relay and transistor, etc. So for crucial output signals which could cause major accident, some external safety circuit and agencies should be designed, to make sure the mechanical devices operate with safety.	12 41

Safety Notes

Please Read Before Use



2. Installation Guidelines

 CAUTION	Page Ref.
<ul style="list-style-type: none">• The product should be used under certain conditions as stated in “1-6 General Specifications” of this manual.• The product should NOT be used under the following conditions:<ul style="list-style-type: none">(1) Excessive or conductive dust, corrosive or flam. gas, or oily smoke.(2) Excessive heat, moisture or rain, condensation, regular impact shocks or excessive vibration. The above-mentioned conditions may cause electric shock, fire or misoperation and damage the product.• Take special care not to allow debris to fall inside the unit during installation e.g. making screw holes, cut wires etc, for it may cause fire, product damage or mis-reaction.• Once the installation is complete, remove the protective paper band on the PLC to prevent fire, product damage or mis-reaction caused by the overheating.• Install the connection cables and expansion modules properly, and make sure they are fixed, for loose contact may cause mis-reaction.• DO NOT install the product on the basement, top or along the vertical direction of a switchboard, to avoid overheating.• Ensure that there is a space larger than 50 mm around the installed PLC and it is kept as far as possible from high-voltage cables, high-voltage equipment and power equipment.	29

Safety Notes

Please Read Before Use



3. Wiring Guidelines

 DANGER	Page Ref.
<ul style="list-style-type: none">• Cut all the external power during installation or wiring, to avoid electric shock or product damage.• Close the terminal cover before switch on the power supply after installation or wiring, to avoid electric shock.	31
 CAUTION	Page Ref.
<ul style="list-style-type: none">• When wiring AC supplies, it must be connected to the correct input terminal, for if it is connected to DC (Direct Current) input/output terminal or DC power terminal, the PLC will be damaged.• DO NOT connect the 24V OUT ⊕ terminal of a PLC main unit to the 24V OUT ⊕ terminal of an extension unit, or to the ⊕ terminal of an external power supply, for it may damage the PLC.• DO NOT do any external wiring for the empty terminals □ of a PLC, for it may damage the product.• Connect the grounding terminal of the main unit using the class 3 grounding standard, but DO NOT ground it with major power systems. (Refer to 1-6)	31 35 41

Safety Notes

Please Read Before Use

4. Operation and Maintenance Guidelines

 DANGER	Page Ref.
<ul style="list-style-type: none">• DO NOT contact the terminal when the power supply switched on, to avoid electric shock or product mis-reaction.• Switch off the power supply before clean or tighten the terminal, to avoid electric shock.• Carry program-change-in-operation (force output, RUN, STOP, etc) ONLY after carefully read and understand this manual and safety is ensured, for misoperation may cause equipment damage or accident.	53
 CAUTION	Page Ref.
<ul style="list-style-type: none">• Switch off the power supply before assemble or overhaul the selected optional units, to avoid damage to the expansion or main units.• Switch off the power supply before assemble or overhaul the connection cable, to avoid damage or misoperation.• DO NOT assemble or overhaul the product cage, or alter it by yourself, for it may cause product damage, mis-reaction or fire.• Contact the nearest distributor or Vigor Electric Corp directly for any product repairing matters.	53

Safety Notes

Please Read Before Use

5. Recycling Guidelines

 CAUTION	Page Ref.
<ul style="list-style-type: none">• Dispose the product as industrial waste when it is to be discarded as worthless.	58


Foreword	2	4. Input Specifications and External Wiring	35
1. VH Series PLC Introductions	3	4-1 Input Point Specifications	36
1-1 System Configuration	4	4-2 Input Point Wiring Introduction	37
1-2 Component Names	5	4-3 Input Wiring Notes	38
1-3 Model Numbering	8	4-4 About the X0–X7 Input Points	39
1-4 Extension Units Introductions	10	5. Output Specifications and External Wiring	40
1-5 Error Code Display Function Introductions	11	5-1 Output Point Specifications	41
1-6 General Specifications	12	5-2 Output Wiring Introduction	42
1-7 Performance Specification	14	5-3 Output Wiring Notes	43
1-8 Instruction Tables	16	5-4 About the Y0 Output Point	44
1-9 Special Components and Error Messages	19	6. Optional Modules	45
1-10 Terminal Layouts	23	6-1 Models of Optional Modules	45
1-11 Product List	26	6-2 Communication Expansion Board	46
1-12 Dimensions	28	6-3 Memory Card Slot Expansion Card	48
2. Installation Work	29	6-4 Use the VB-MP1R	49
2-1 Installation Guides	30	6-5 Connection Cables	51
2-2 Wiring Guidelines	30	7. Operation Rehearsal, Maintenance and Error Checking ..	53
3. Power Specifications and External Wiring	31	7-1 Operation Rehearsal	54
3-1 Power Specifications	32	7-2 Determine Exceptional Behavior through the LED Indicator ..	55
3-2 AC Power Wiring Example	33	7-3 Maintenance	58
3-3 DC Power Wiring Example	34		

About the Manual


When purchasing VH series PLC main unit, a copy of this hardware manual will be attached. For programming tutorial or instruction tables, please refer to the "Programming Manual for M, VB and VH Series PLC".

Manual Name	Content
Hardware Manual for VH Series PLC (This manual)	<ul style="list-style-type: none">• Introduction to the VH series PLC• Specification and guidelines for the operation environment, wiring and installation of the VH series PLC• Specification and instructions for the installation and operation of the selected optional units.• Instructions for the operation, maintenance and fault repair of the PLC.
Programming Manual for M, VB and VH Series PLC	<ul style="list-style-type: none">• Introduction to the various components of the M, VB and VH series PLC.• Introduction to the basic and applied instructions.• Programming guidelines.

About the Trademark

- The  trademark belongs to the VIGOR ELECTRIC CORP. of Taiwan.
- WINDOWS is a registered trademark under Microsoft Corporation of United States.
- Any other product or service names mentioned in this manual are all intelligent property of their respective owners.

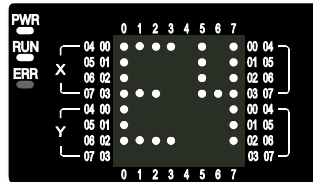
Great, Reliable Performance at a Budget Price



- ◇ Error Code Display Function
 - The machine maintenance work is made easier by this practical powerful function.
- ◇ Complete Product Model Collections, Cost-Saving Customized Module Assembling
 - 8 models of main unit to be chosen from: 10/14/20/24/28/32/40/60 points.
 - Many I/O extension module models to provide complete extension ability: 4X/4Y~16X/16Y, etc.
- ◇ Complete and Powerful Communication Ability
 - Built-in RS-232 interface can connect with PC or HMI (Human Machine Interface).
 - Can extend to a local area monitor network.
- ◇ Small & Compact Design to Save Install Space
- ◇ Complete and Powerful System Functions
 - No-battery program storage device: Flash ROM.
 - Download program with component and program comments to make the maintenance work easier.
 - Complete collection of instructions, including compare point instruction, makes the PLC programming work easier.
 - Password Lock function on the PLC program, fully protect the intelligent property.
 - The RTC (Real Time Clock) expansion card can set timer and run periodical automated control.
 - Wide range voltage design (AC85V~264V) of the power input.



1. VH Series PLC Introductions

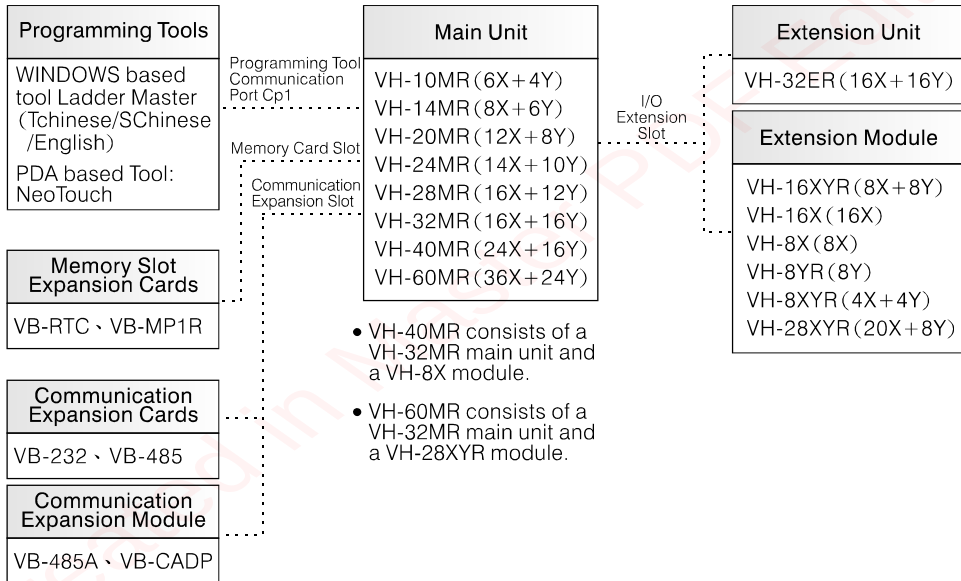1-1 System Configuration



1-2 Component Names

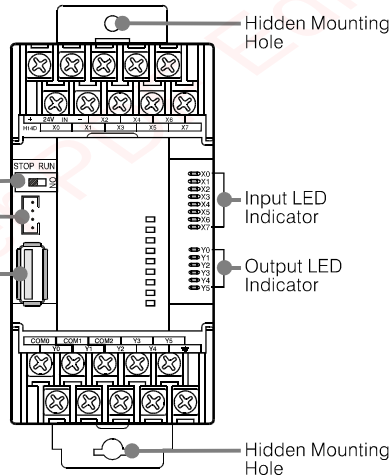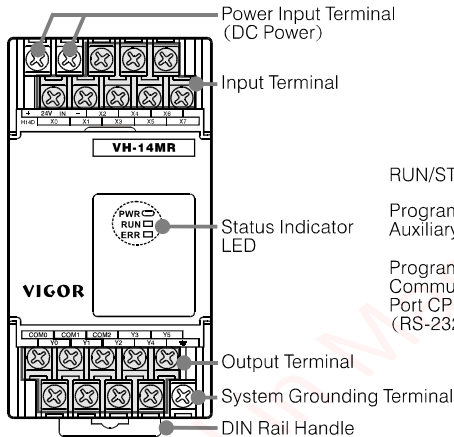VH-10/14MR



DO NOT connect any PC USB interface to the programming tool communication port for the comm. Interface is RS-232 although it is an USB A-type connector.

CAUTION Use the MWPC-200 cable to connect the programming tool communication port to PC RS-232 interface. Use VBUSB-200 cable instead if the PC has no RS-232 interface.


The VH-10/14 MR main unit has no comm. expansion/memory card/IO extension slots.

1. VH Series PLC Introductions

- Status Indicator LED

LED	Action	Status
PWR (GREEN)	ON	Power in Supply
	OFF	Power Cut
RUN (GREEN)	ON	RUN
	OFF	STOP
ERR (RED)	ON	System Error (Stop Running)
	FLICKERING	Abnormal State (Stop Running)
	OFF	Normal State

 - Sliding Switch




Switch Number	Function	OFF	ON
1	RUN/STOP Switch	STOP	RUN
2	I/O Display Range Switch	X0~X37 Y0~Y37	X40~X77 Y40~Y77

- The Programming Tool Auxiliary Port is used to connect to HMI or SCADA (Supervisor Control and Data Acquisition) System. This auxiliary port is parallel linked with the Programming Tool Communication Port, so they cannot be used at the same time.


1. VH Series PLC Introductions

1-3 Model Numbering

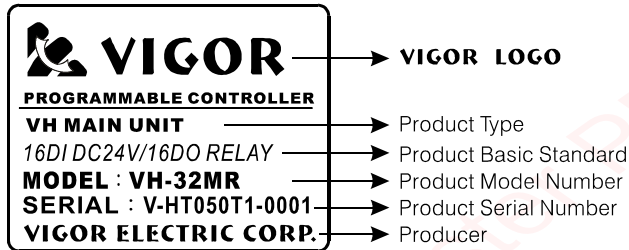
- Model Numbering Tag (Pasted on the right side of a PLC)




- Main Unit Model Numbering

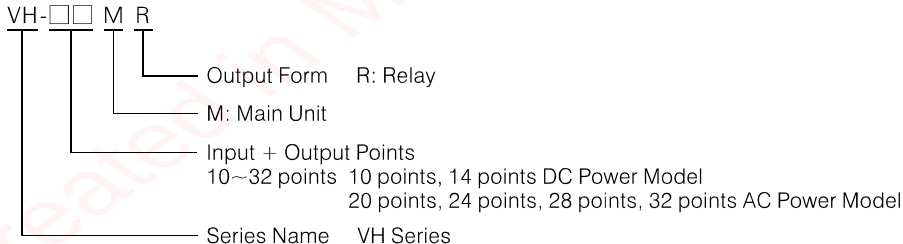

- Extension Unit Model Numbering

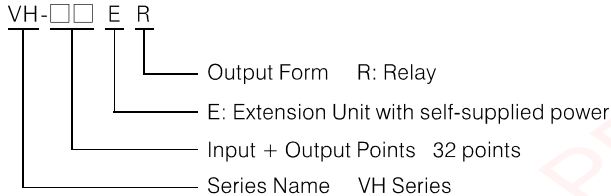


- Extension Module Model Numbering

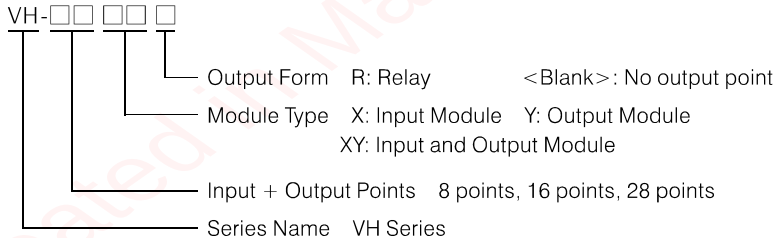

1. VH Series PLC Introductions

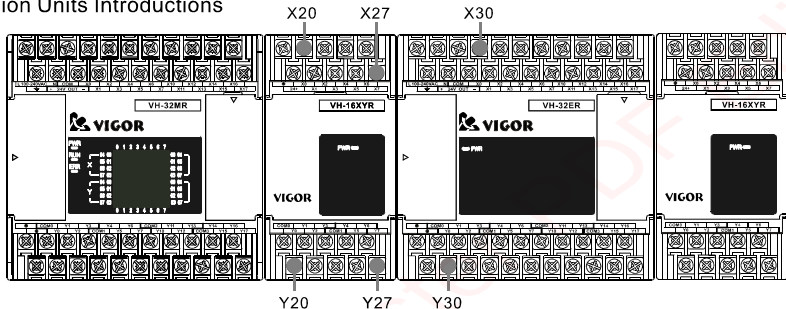1-4 Extension Units Introductions





- VH-10MR and VH-14MR do not have the I/O Extension function
- VH Series Main Unit always occupies the I/O address X0~X17/Y0~Y17, and thus the first Expansion Unit /Module will use the I/O address from X20/Y20 onwards.
- VH-8XY Extension Module occupies 8 input points and 8 output points.
- VH-28XYR Extension Module occupies 24 input points and 8 output points.
- Maximum output/input points: 128 points X0~X77 /Y0~Y77
- VH-40MR consists of a VH-32MR Main Unit and a VH-8X Module, occupies I/O addresses X0~X27/Y0~Y17.
- VH-60MR consists of a VH-32MR Main Unit and a VH-28XYR Module, occupies I/O addresses X0~X47/Y0~Y27.
- VH series Main Unit and Extension Unit have self-supply power units, but the Extension Module does not. So the Extension Module needs to get power from a Main Unit or Expansion Unit.
- 2 Conditions must be met when the Main Unit or Extension Unit connect to other modules:
 - (1) The number of modules connected after the Main Unit or Extension Unit should be ≤ 6 .
 - (2) The total number of ON relays in the Main Unit or Extension Unit and the Extension Modules connected after them should be ≤ 32 .

1-5 Error Code Display Function Introductions

The Multi-Functional Display on the Main Unit panel has an Error Code Display function besides the I/O Display function. It can display 109 error codes from 01~99 and E0~E9. This function is very practical and it makes the device maintenance work much easier than before.

The D9080 special register controlled Multi-Functional Display of VH Series PLC has the following functions:

Value of D9080	MFD Function
0	Displays Input/Output status of PLC
1~99	Displays 01~99 numbers
100~109	Displays E0~E9 Error Code

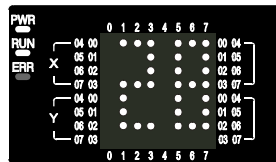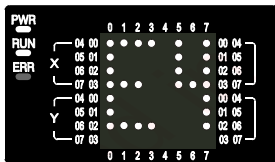

1. VH Series PLC Introductions

1-6 General Specifications

Design Guidelines




DANGER

- Please set up an external safety circuit for the PLC, so that if the external power fails or the PLC breaks down, the system can still operate with safety.
- Any misoperation or mis-output could possibly cause accident.
- External protective circuits should be designed for a PLC to avoid mechanical damage. E.g. Emergency Stop, Forward/Reverse Inter-Lock or Upper/Lower Limit Positioning.
- A PLC CPU detects abnormal states through self-examine functions such as Watch Dog Timer (WDT) and will then switch off all its outputs. Anyway, it is not able to detect the state of the input/output control circuits and thus may not be able to control the output when error occurs. So in order to protect the mechanical equipment, some external safety circuits and agencies should be designed.
- A PLC may not be able to control the ON/OFF state when error occurs to its output relay and transistor, etc. So for crucial output signals which could cause major accident, some external safety circuit and agencies should be designed, to make sure the mechanical devices operate with safety.

1. VH Series PLC Introductions

Item	Specifications
Work Ambient Temperature	0~55°C / 32~131°F
Storage Ambient Temperature	-20~70°C / -4~158°F
Work Ambient Humidity	10~90% RH, (at 25°C / 77°F, no condensation)
Storage Ambient Humidity	10~90% RH, (at 25°C / 77°F, no condensation)
Vibration Tolerance	10~55 Hz with amplitude of 0.075 mm / 0.30 inch and acceleration along X, Y and Z axes each for 80 min (8 min/Cycle × 10 times = 80 min) at 55 ~ 150 Hz with 1G.
Shock Tolerance	10 G along X, Y and Z axes each for three times
Noise Immunity	Noise Simulator 1500 Vp-p, 1μS Pulse Width and 25~60Hz Frequency
Dielectric Strength	1500VAC 1 min between AC terminal and rack panel or 500VAC 1 min between DC terminal and rack panel
Insulation Resistance	5 MΩ or above at DC 500V between AC terminal and rack panel
Grounding	Class-3 Grounding (DO NOT ground with major power supply equipment.) ※
Environmental Condition	Keep away from corrosive gas or excessive dust.

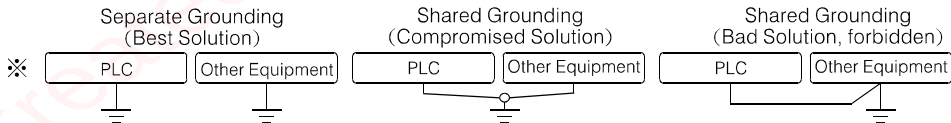

1. VH Series PLC Introductions

1-7 Performance Specification

Item		Specifications	
Operation Control Method		Cyclic Operation by Stored Program	
Programming Language		Electric Ladder Diagram + SFC	
I/O Control Method		Batch Processing	
Operation Processing Rate	Basic Instruction	0.375~12.56 μ s	
	Applied Instruction	Several μ s ~ Several hundreds of μ s	
Number of Instructions	Basic Instruction	27 (including LDP, LDF, ANDP, ANDF, ORP, ORF, INV)	
	Stepladder Instructions	2	
	Applied Instructions	73	
Memory Capacity	Program Capacity	Built-in 4 K Steps Flash ROM	
	Component Comment Capacity	2730 comments (16 characters or 8 double-byte characters for each)	
	Program Comment Capacity	20,000 characters or 10,000 double-byte characters	
Max. Input / Output Points		128 points: X0 ~ X77, Y0 ~ Y77	
Internal Relay	Auxiliary Relay (M)	General	384 points: M0 ~ M383
		Latched	128 points: M384 ~ M511
		Special	256 points: M9000 ~ M9255
	State Relay (S)	Initial	10 points: S0 ~ S9 (Latched)
		Latched	118 points: S10 ~ S127
Timer (T)	100mS	63 pts when M9028 OFF: T0 ~ T62 (Timer range: 0.1 ~ 3276.7 sec.)	
	10mS	31 pts when M9028 ON: T32 ~ T62 (Timer range: 0.01 ~ 327.67 sec.)	
	1mS	1 point: T63 (Timer range: 0.001 ~ 32.767 sec.)	
Counter (C)	16-bit Up	General	16 points: C0 ~ C15
		Latched	16 points: C16 ~ C31

1. VH Series PLC Introductions

Item		Specifications	
High Speed Counter (C)	32-bit Up/Down, Latched	1-phase Counter	11 points: C235 ~ C245 (Signal Frequency: 10 kHz Max.)
		2-phase Counter	5 points: C246 ~ C250 (Signal Frequency: 10 kHz Max.)
		A/B Phase Counter	4 points: C251 ~ C254 (Signal Frequency: 5 kHz Max.)
Data Register (D)		General	128 points: D0 ~ D127
		Latched	128 points: D128 ~ D255
		Special	256 points: D9000 ~ D9255
		Index	16 points: V0 ~ V7, Z0 ~ Z7
Pointer		Call Pointer (P)	64 points: P0 ~ P63
		Interrupt Pointer (I)	15 points: 6 points for external interrupt, 3 points for timer interrupt, and 6 points for counter interrupt
		Nest Pointer (N)	8 points: N0 ~ N7
Constants Range	Decimal (K)	16 Bits	-32768 ~ 32767
		32 Bits	-2147483648 ~ 2147483647
	Hexadecimal (H)	16 Bits	0H ~ FFFFH
		32 Bits	0H ~ FFFFFFFFH
Pulse Output		1 point, Max. 7 kHz	
Programming Device Link Interface CP1		RS-232C, can connect to PC, HMI or MODEM directly.	
Communication Link Interface CP2 (Optional)		RS-232C or RS-422 / RS-485, can connect to PC or HMI	
Communication Link Interface CP3 (Optional)		RS-485, can connect to PC or HMI	
Real Time Clock (Optional)		Displays year, month, day, hour, min., sec. and week	
Error Code Display Function		Displays 109 error codes (01~99 and E0~E9)	

1. VH Series PLC Introductions

1-8 Instruction Tables

Basic Instruction Table

Inst.	Function	Devices	Inst.	Function	Devices
LD	Initial logical operation A contact	X · Y · M · S · T · C	MC	Start of a master control block	N0~N7
LDI	Initial logical operation B contact	X · Y · M · S · T · C	MCR	End of a master control block	N0~N7
AND	Serial link of NO contacts	X · Y · M · S · T · C	MPS	Stores current internal opr. Result	—
ANI	Serial link of NC contacts	X · Y · M · S · T · C	MRD	Reads current internal opr. Result	—
OR	Parallel link of NO contacts	X · Y · M · S · T · C	MPP	Pops currently stored result	—
ORI	Parallel link of NC contacts	X · Y · M · S · T · C	NOP	No operation or null step	—
ANB	Serial link of multi. parallel circuits	—	END	Force current prog. scan to end	—
ORB	Paral. link of multi. contact circuits	—	LDP	Init. logical opr. rising edge pulse	X · Y · M · S · T · C
OUT	Final logical op. type coil drive	Y · M · S · T · C	LDF	Init. logical opr. fall. edge pulse	X · Y · M · S · T · C
SET	Sets component permanently ON	Y · M · S	ANDP	Serial link of rising edge pulse	X · Y · M · S · T · C
RST	Resets comp. permanently OFF	Y · M · S · T · C · D	ANDF	Serial link of falling edge pulse	X · Y · M · S · T · C
PLS	Rising edge pulse	Y · M	ORP	Paral. link of rising edge pulse	X · Y · M · S · T · C
PLF	Falling/trailing edge pulse	Y · M	ORF	Paral. link of falling edge pulse	X · Y · M · S · T · C
			INV	Invert current internal opr. result	—

Stepladder Instruction Table

Instruction	Function	Devices
STL	Initiation of Stepladder	S
RET	End of Stepladder	—

1. VH Series PLC Introductions

Extension Unit Model Numbering

Type	FNC NO.	Title*		Function
		D	P	
Program Flow	00		CJ P	Conditional Jump
	01		CALL P	CALL subroutine
	02		SRET	Subroutine RETurn
	03		IRET	Interrupt RETurn
	04		EI	Enable Interrupt
	05		DI	Disable Interrupt
	06		FEND	First END
	07		WDT P	Watch Dog Timer refresh
	08		FOR	Start of a FOR-NEXT loop
	09		NEXT	End of a FOR-NEXT loop
Compare and Move	10	D	CMP P	CoMPare
	11	D	ZCP P	Zone ComPare
	12	D	MOV P	Move
	13		SMOV P	Shift MOVE
	14	D	CML P	CoMpLiment
	15		BMOV P	Block MOVE $n \rightarrow n$
	16	D	FMOV P	Fill MOVE $1 \rightarrow n$
	17	D	XCH P	EXCHange
	18	D	BCD P	Converts BIN \rightarrow BCD
	19	D	BIN P	Converts BCD \rightarrow BIN

Type	FNC NO.	Title*		Function	
		D	P		
Arithmetic and Logical Operations	20	D	ADD P	ADDition	
	21	D	SUB P	SUBtraction	
	22	D	MUL P	MULtiplication	
	23	D	DIV P	DIVision	
	24	D	INC P	INCrement	
	25	D	DEC P	DECrement	
	26	D	WAND P	Logic Word AND	
	27	D	WOR P	Logic Word OR	
	28	D	WXOR P	Logic Word eXclusive OR	
Rotary and Shift	30	D	ROR P	ROtation Right	
	31	D	ROL P	ROtation Left	
	32	D	RCR P	Rotation Right with Carry	
	33	D	RCL P	Rotation Left with Carry	
	34		SFTR P	Bit ShiFT Right	
	35		SFTL P	Bit ShiFT Left	
	38		SFWR P	ShiFt register WRite (FIFO)	
	39		SFRD P	ShiFt register ReaD (FIFO)	

1. VH Series PLC Introductions

Type	FNC NO.	Title*		Function	
		D	P		
Processing	40		ZRST	P	Zone ReSeT
	41		DECO	P	DECOde
	42		ENCO	P	ENCOde
High-speed Processing	50		REF	P	REFresh I/O
	53	D	HSCS		High Speed Counter Set
	54	D	HSCR		High Speed Counter Reset
	56		SPD		SPEed Detection
	57	D	PLSY		PuLSe Y output
	58		PWM		Pulse Width Modulation
Handy Instruction	62	D	ABSD		ABSolute Drum sequencer
	63		INCD		INCremental Drum sequencer
	66		ALT	P	ALTErnate state
	67		RAMP		RAMP variable value
Others	73		SEGD	P	Seven SEGment Decoder
	167		TWR	P	Time WRites to RTC
	176		TFT		Timer (10 ms)
	177		TFH		Timer (100 ms)
	178		TFK		Timer (1 sec.)

Type	FNC NO.	Title*		Function	
		D	P		
In-line Comparisons	224	D	LD=		LoaD when (S1) = (S2)
	225	D	LD>		LoaD when (S1) > (S2)
	226	D	LD<		LoaD when (S1) < (S2)
	228	D	LD<>		LoaD when (S1) ≠ (S2)
	229	D	LD<=		LoaD when (S1) ≤ (S2)
	230	D	LD>=		LoaD when (S1) ≥ (S2)
	232	D	AND=		AND when (S1) = (S2)
	233	D	AND>		AND when (S1) > (S2)
	234	D	AND<		AND when (S1) < (S2)
	236	D	AND<>		AND when (S1) ≠ (S2)
	237	D	AND<=		AND when (S1) ≤ (S2)
	238	D	AND>=		AND when (S1) ≥ (S2)
	240	D	OR=		OR when (S1) = (S2)
	241	D	OR>		OR when (S1) > (S2)
	242	D	OR<		OR when (S1) < (S2)
	244	D	OR<>		OR when (S1) ≠ (S2)
245	D	OR<=		OR when (S1) ≤ (S2)	
246	D	OR>=		OR when (S1) ≥ (S2)	

1-9 Special Components and Error Messages

In the tables below, the symbol "■" represents that the component cannot be driven by instructions and no data can be written into it. And for any component that is not listed below, it is reserved for system use, and cannot be driven by instructions and no data can be written into either.

Coil No.	Function
PLC Operation Status.	
■ M9000	Always-ON A Contact during RUN period
■ M9001	Always-OFF A Contact during RUN period
■ M9002	Initial Pulse A Contact, ON for a scan time
■ M9003	Initial Pulse B Contact, OFF for a scan time
■ M9004	Error occurs
Clock Pulse	
■ M9011	10ms cycles pulse. ON 5ms/OFF 5ms
■ M9012	100ms cycles pulse. ON 50ms/OFF 50ms
■ M9013	1sec. cycles pulse. ON 0.5Sec/OFF 0.5Sec
■ M9014	1min. cycles pulse. ON 30Sec/OFF 30Sec
System Status	
■ M9005	ON when battery of the RTC is low
■ M9018	ON when RTC installed in the Main Unit
M9028	OFF T32~T62 become 100ms counter
	ON T32~T62 become 10ms counter
M9031	Clear the Non-Latched area memory
M9032	Clear the Latched area memory
M9033	Not clear data memory when RUN → STOP.

Coil No.	Function
System Status	
M9034	All the outputs are disabled
M9039	Constant Scan Time set by D9039
Flag	
■ M9020	Zero Flag. Result of ADD or SUB is "0"
■ M9021	Borrow Flag. Borrow occurred to ADD or SUB
M9022	Carry Flag. Carry occurred to ADD or SUB
■ M9029	Execution complete flag for some instructions
Assigned Operation Mode of Applied Instructions	
M9024	Assign BMOV moving directions
M9025	Assign external HSC reset mode
M9026	Assign RAMP hold mode
M9168	Assign SMOV operation mode
Stepladder Instruction Flags	
M9040	Step Ladder move prevented
■ M9046	STL step is working
M9047	STL monitoring is enabled

1. VH Series PLC Introductions

Coil No.	Function
Interrupt Prevented	
M9050	Input interrupt I00□ is prevented.
M9051	Input interrupt I10□ is prevented.
M9052	Input interrupt I20□ is prevented.
M9053	Input interrupt I30□ is prevented.
M9054	Input interrupt I40□ is prevented.
M9055	Input interrupt I50□ is prevented.
M9056	Input interrupt I6□□ is prevented.
M9057	Input interrupt I7□□ is prevented.
M9058	Input interrupt I8□□ is prevented.
M9059	HSCounter interrupt I010~I060 disallow
Error Message	
■M9019	Real Time Clock setting error.
■M9066	Program CHECK SUM error.
■M9067	Operation error. PLC will keep running.
M9068	IOperation error latch.
Control and Monitor High Speed Counter Count. Direction	
■M9235 ?	When M92□□="OFF", C2□□ is up counter
■M9245	When M92□□="ON", C2□□ is down counter
■M9246 ?	When C2□□ is up counter, M92□□=OFF
■M9254	When C2□□ is down counter, M92□□=ON

Table for Special Registers

Coil No.	Function
PLC Operation Status	
D9000	Time Setting of Watch Dog Timer. (unit: 1ms)
■D9004	Error coil ID shows the source of the error.
■D9010	Current operation scan time (unit: 1ms)
■D9011	Min. scan time (unit: 1ms)
■D9012	Max. scan time (unit: 1ms)
System Status	
■D9001	Displays the PLC model and version. (※1)
■D9002	Capacity size of Memory. 2 for 2000 steps.
■D9003	Type of Memory. (※2)
D9020	X0~X7 input response time setting: 0~15ms.
D9039	Constant Scan Time setting.
Real Time Clock Data	
D9013	Second value. (0~59)
D9014	Minute value. (0~59)
D9015	Hour value. (0~23)
D9016	Day value. (1~31)
D9017	Month value. (1~12)
D9018	Year value: 2000~YYYY (4 digits)
D9019	Weekday value: 0 (Sun.) ~ 6 (Sat.)

1. VH Series PLC Introductions

Coil No.	Function		
Step Ladder Instructions			
■ D9040	1 st active STL step	When M9047 ON, the step point ID which are in action is stored in D9040~D9047. Where the smallest one is stored in D9040, the second smallest one is stored in D9041 and so forth.	
■ D9041	2 nd active STL step		
■ D9042	3 rd active STL step		
■ D9043	4 th active STL step		
■ D9044	5 th active STL step		
■ D9045	6 th active STL step		
■ D9046	7 th active STL step		
■ D9047	8 th active STL step		
Error Message			
■ D9067	Error code identifying Operation error.		
D9068	Latched the step address number of opr. Error		
■ D9069	Step address number of Operation error.		
Multi-Functional Error Code Display			
D9080	Control Display	0	Displays the I/O Status
		1~99	Displays 1~99
		100~109	Displays E0~E9
High Speed Process Instruction			
■ D9136	Lower 16 bits	Total number of output pulses using PLSY instruction.	
■ D9137	Higher 16 bits		
■ D9140	Lower 16 bits	Total number of output pulses using PLSY instruction.	
■ D9141	Higher 16 bits		

Coil No.	Function	
Index Register V, Z		
D9180	Z0 Index Register	
D9181	V0 Index Register	
D9182	Z1 Index Register	
D9183	V1 Index Register	
D9184	Z2 Index Register	
D9185	V2 Index Register	
D9186	Z3 Index Register	
D9187	V3 Index Register	
D9188	Z4 Index Register	
D9189	V4 Index Register	
D9190	Z5 Index Register	
D9191	V5 Index Register	
D9192	Z6 Index Register	
D9193	V6 Index Register	
D9194	Z7 Index Register	
D9195	V7 Index Register	

※1

2	1	1	0	0
---	---	---	---	---

Version: V1.00

Model: VH Series

※2 00H indicates a built-in Flash Memory of PLC.
01H indicates an expanded VB-MP1R Memory Card.






1. VH Series PLC Introductions

Error Message Specifications





Operation Error Code (the value of D9067)

Error Code	Detail
0	No Error
6702	More than 5 layers of Call instruction have been nested together.
6703	More than 2 layers of Interrupt Insert have been nested together.
6704	More than 5 layers FOR / NEXT have been nested together.
6705	Incompatible device assigned as operand of applied instruction.
6706	Allowable range of applied instruction operand exceeded.





 
 
 
 
 
1-10 Terminal Layouts



 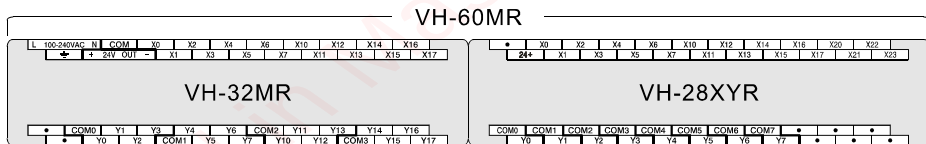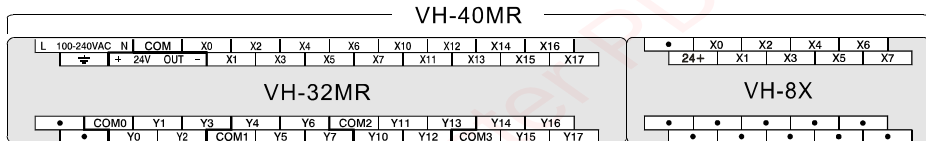 1. VH Series PLC Introductions



         1. VH Series PLC Introductions



1. VH Series PLC Introductions

1-11 Product List

Item	Model	Main Specification
Main Unit	VH-10MR	DC 24V Power, 6 points DC24V Input, 4 points Relay Output
	VH-14MR	DC 24V Power, 8 points DC24V Input, 6 points Relay Output
	VH-20MR	AC Power, 12 points DC24V Input, 8 points Relay Output, provide DC24V Output 420mA
	VH-24MR	AC Power, 14 points DC24V Input, 10 points Relay Output, provide DC24V Output 420mA
	VH-28MR	AC Power, 16 points DC24V Input, 12 points Relay Output, provide DC24V Output 420mA
	VH-32MR	AC Power, 16 points DC24V Input, 16 points Relay Output, provide DC24V Output 420mA
	VH-40MR	AC Power, 24 points DC24V Input, 16 points Relay Output, provide DC24V Output 420mA
	VH-60MR	AC Power, 36 points DC24V Input, 24 points Relay Output, provide DC24V Output 420mA
Extension Unit	VH-32ER	AC Power, 16 points DC24V Input, 16 points Relay Output, provide DC24V Output 420mA
Extension Module	VH-28XYR	20 points DC24V Input, 8 points Relay Output
	VH-16XYR	8 points DC24V Input, 8 points Relay Output
	VH-16X	16 points DC24V Input
	VH-8XYR	4 points DC24V Input, 4 points Relay Output
	VH-8X	8 points DC24V Input
	VH-8YR	8 points Relay Output
Communication Module	VB-485A	RS-485 Communication Module; Photocoupler Isolated; Max. Distance: 1000M/3280'
	VB-CADP	One Isolated RS-232 / RS-485 Port and one Isolated RS-485 Port; Max. Distance: 1000M/3280'
Connection Cables	VB-232	RS-232C Communication Expansion Card
	VB-485	RS-422 / RS-485 Communication Expansion Card; non-Isolated; Max. Distance: 50M/164'
Power Supplier	VB-MP1R	Flash ROM Program Memory Card (4K Steps for the VH series PLC); including the RTC (Real Time Clock) function
	VB-RTC	RTC (Real Time Clock) Expansion Card


1. VH Series PLC Introductions

Item	Model	Main Specification
Connection Cables	MWPC-200	Cable between a PLC (CP1 A-type USB) and Computer (9-pin female connector); Length: 200cm/6'7"
	MWMD-200	Cable between a PLC (CP1 A-type USB) and MODEM (9-pin male connector) with a length of 200cm/6'7"
	MWPC25-200	Cable between a PLC (CP1 A-type USB) and Computer (25-pin female connector); Length: 200cm/6'7"
	VBPC09-200	Cable between a PLC (CP1 JST 4P) and Computer (9-pin female connector); Length: 200cm/6'7"
	VBMD09-200	Cable between a PLC (Cp1 JST 4P) and MODEM (9-pin male connector); Length: 200cm/6'7"
	VBPC25-200	Cable between a PLC (CP1 JST 4P) and Computer (25-pin female connector); Length: 200cm/6'7"
	VBFDHMI-200	Cable between a PLC (CP1 JST 4P) and Fuji, Digital HMI (25-pin male D-SUB); Length: 200cm/6'7"
	VHEC-050	VH Series PLC Expansion Extended cable; Length: 50cm/19.7"
Power Supplier	VB-30PS	30W power supply; power input: AC 110V or AC 220V; outputs: DC 24V 1.2A and DC 5V 0.2A


※The VH-10/14MR Main Units do not have communication expansion slot, memory card slot and the I/O extension slot.

1. VH Series PLC Introductions

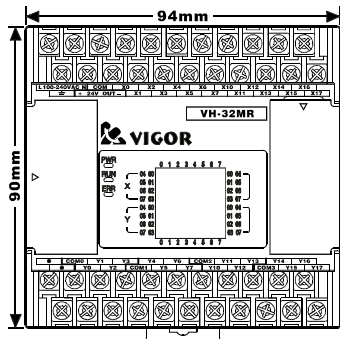
1-12 Dimensions



Main Unit/Extension Unit

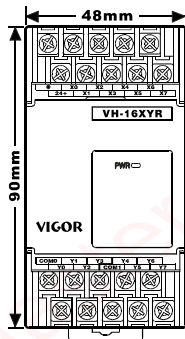

Main Unit/Extension Module

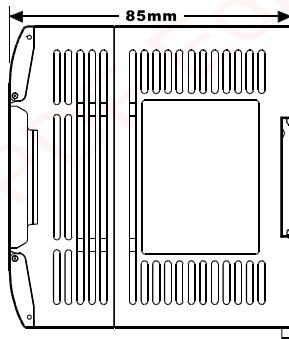

Model	Weight (kg)
VH-10MR	0.31
VH-14MR	0.32
VH-20MR	0.56
VH-24MR	0.57
VH-28MR	0.57

Model	Weight (kg)
VH-32MR	0.57
VH-40MR	0.77
VH-60MR	0.91
VH-32ER	0.54
VH-16XYR	0.29

Model	Weight (kg)
VH-16X	0.26
VH-8XYR	0.26
VH-8X	0.29
VH-8YR	0.27
VH-28XYR	0.34

Installation Safety Guidelines



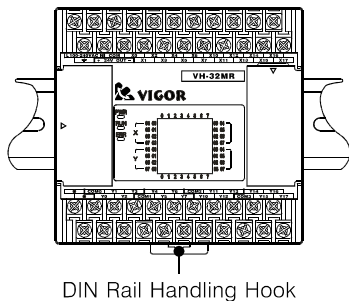
CAUTION

- The product should be used under certain conditions as stated in “1-6 General Specifications” of this manual.
- The product should NOT be used under the following conditions:
 - (1) Excessive or conductive dust, corrosive or flam. gas, or oily smoke.
 - (2) Excessive heat, moisture or rain, condensation, regular impact shocks or excessive vibration. The above-mentioned conditions may cause electric shock, fire or misoperation and damage the product.
- Take special care not to allow debris to fall inside the unit during installation e.g. making screw holes, cut wires etc, for it may cause fire, product damage or mis-reaction.
- Once the installation is complete, remove the protective paper band on the PLC to prevent fire, product damage or mis-reaction caused by the overheating.
- Install the connection cables and expansion modules properly, and make sure they are fixed, for loose contact may cause mis-reaction.
- DO NOT install the product on the basement, top or along the vertical direction of a switchboard, to avoid overheating.
- Ensure that there is a space larger than 50 mm around the installed PLC and it is kept as far as possible from high-voltage cables, high-voltage equipment and power equipment.

2. Installation Work

2-1 Installation Guides



• DIN Rail Installation



2-2 Wiring Guidelines

- DO NOT pass PLC's Input Signal and Output signal through the same cable.
- DO NOT tie the Input Signal cable/Output Signal Cable together with other power cables.
- Limit the cable length to be within 20 meters for safety reasons.
- Use O or Y type terminal when wiring as specified on the right hand side diagram.
- Tighten the screw properly to avoid misoperation. The proper strength used to turn the terminal screw is 5~8kg-cm.

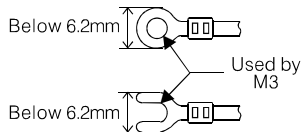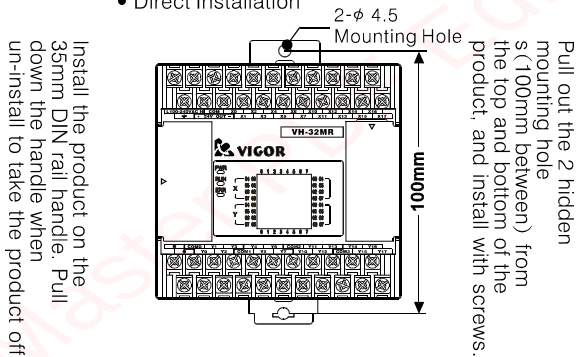• Direct Installation



3. Power Specifications and External Wiring

Wiring Safety Guidelines



DANGER

- Cut all the external power during installation or wiring, to avoid electric shock or product damage.
- Close the terminal cover before switch on the power supply after installation or wiring, to avoid electric shock.

Wiring Safety Guidelines



CAUTION

- When wiring AC supplies, it must be connected to correct input terminal, for if it is connected to DC (Direct Current) input/output terminal or DC power terminal, the PLC will be damaged.
- DO NOT connect the 24 V OUT ⊕ terminal of a PLC main unit to the 24 V OUT ⊕ terminal of an extension unit, or to the ⊕ terminal of an external power supply, for it may damage the PLC.
- DO NOT do any external wiring for the empty terminals of a PLC, for it may damage the product.
- Connect the grounding terminal of the main unit using the class 3 grounding standard, but DO NOT ground it with major power systems. (Refer to 1-6)

3. Power Specifications and External Wiring


3-1 Power Specifications

Power Specifications (Including All VH Series Main Units and Extension Units)

Item	AC Power	DC Power
Input Voltage	AC100 ~ 240V +10% / -15%	DC24V +20% / -15%
Input Frequency	50/60Hz	—
Max. allowable momentary power failure period	Within 10 ms.	Within 1 ms.
Power Fuse	250V 2A	250V 0.5A
Power Consumption	30 VA	5W
Power Unit Output Current	DC5V 400mA	—
	DC12V 530mA	—
	DC24V $\pm 15\%$ 420mA; output from terminal	—

3. Power Specifications and External Wiring

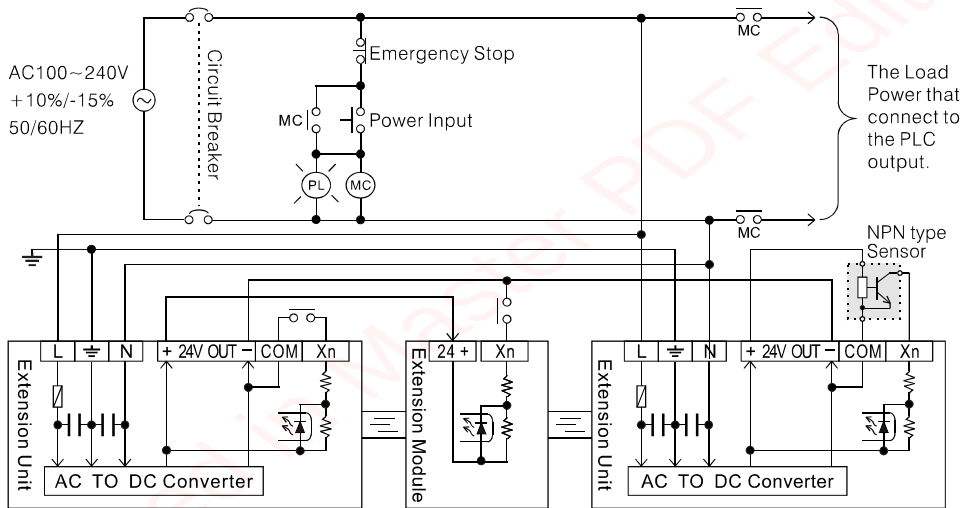3-2 AC Power Wiring Example




CAUTION

- 24V OUT can be used as sensor power but DO NOT send external power to it.
- DO NOT do external wiring for any empty terminal or use it as a relay terminal.
- DO NOT connect the positive terminal of the Main Unit and Extension Unit together, but please connect their negative terminals together.

3. Power Specifications and External Wiring

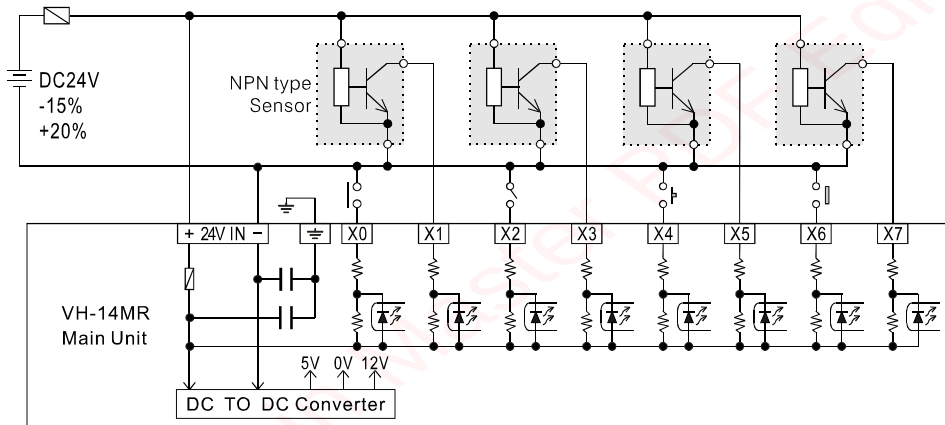3-3 DC Power Wiring Example



- Connect the 24V IN terminal of the Main Unit with Direct Current power of DC 24V 15%/+20%.
- Try to use Constant Voltage Power Supply if possible. Make sure a Wave Filter Capacitor is used if need to use a full-wave Rectifying Power Supply
- DO NOT do external wiring for any empty terminal or use it as a relay terminal.

Wiring Safety Guidelines



CAUTION

- When wiring AC supplies, it must be connected to correct input terminal, for if it is connected to DC (Direct Current) input/output terminal or DC power terminal, the PLC will be damaged.
- DO NOT connect the 24 V OUT ⊕ terminal of a PLC main unit to the 24 V OUT ⊕ terminal of an extension unit, or to the ⊕ terminal of an external power supply, for it may damage the PLC.
- DO NOT do any external wiring for the empty terminals of a PLC, for it may damage the product.
- Connect the grounding terminal of the main unit using the class 3 grounding standard, but DO NOT ground it with major power systems. (Refer to 1-6)


4. Input Specifications and External Wiring

4-1 Input Point Specifications


Item	Specification
Input Activating Voltage	DC24V \pm 15%
Input Signal Circuit	7 mA / DC 24V
Input ON Circuit	Above 3.5 mA
Input OFF Circuit	Below 1.7 mA
Input Resistance	3.3 K Ω approximately
Input Response Time	10 ms approximately, X0~X7 can be set to be 0~15 ms by changing the value of D9020.
Input Signal Type	Dry Contact or NPN open collector transistor
Isolation Mode	Photocoupler Isolation

Circuit Diagram

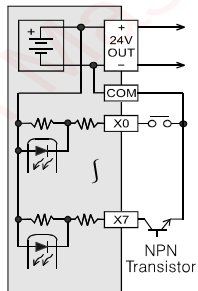AC Power Model




DC Power Model

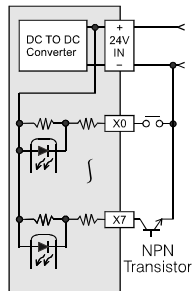


4. Input Specifications and External Wiring

4-2 Input Point Wiring Introduction

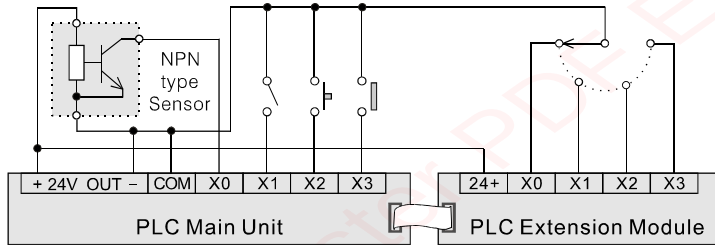
- Input Point Wiring Example



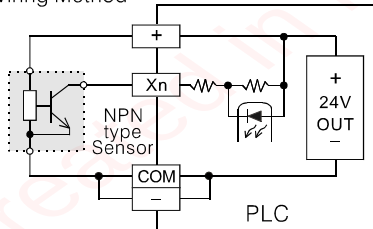- “Sensor Power Provided by PLC”
Wiring Method



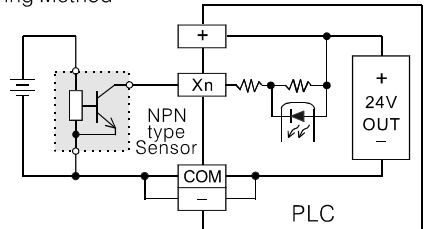
- “Sensor Power Provided by External Source”
Wiring Method



4. Input Specifications and External Wiring


4-3 Input Wiring Notes

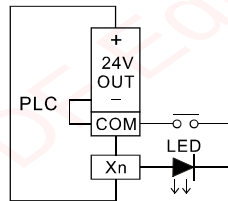- The input point current of this product is 7mA/DC24V. So please choose a mini switch as input device, which suits such micro-current. Loose contact problem may occur if macro-current switch is used.
- Keep the voltage drop below 4V approximately if serial diode string is used in the input circuit, as shown in the right hand side diagram.




- Make sure the Parallel Resistor has more than 15KΩ Rp if used in the input circuit, as shown in the diagram below. And if the resistor Rp is less than 15KΩ, please install a pull up resistor Rb.
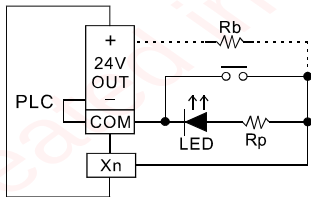
$$R_b \leq \frac{4R_p}{15 - R_p} \text{ (K}\Omega\text{)}$$



- Install a pull up resistor Rb if the OFF current leakage of the 2-wire-close-contact switch used is more than 1.5mA, as shown in the diagram below.
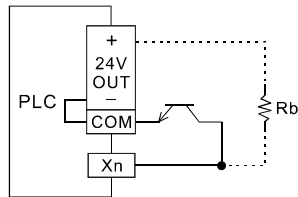
$$R_b \leq \frac{6}{I \text{ (OFF Current Leakage)} - 1.5} \text{ (K}\Omega\text{)}$$



4. Input Specifications and External Wiring

4-4 About the X0~X7 Input Points

There are 8 input points (X0~X7) in the VH Series Main Unit. These 8 points have high speed input function such as High Speed Counter, External Interrupt Insertion and Speed Detection, etc. When X0~X7 are not used as high speed inputs, they can still be used as common input points.

The corresponding relations of X0~X7 input terminals and their high speed applications are listed below:

In/Out	1-Phase Counter										2-Phases Counter					A/B-Phase Counter				External Interrupt Insertion	Speed Detect		
	C235	C236	C237	C238	C239	C240	C241	C242	C243	C244	C245	C246	C247	C248	C249	C250	C251	C252	C253			C254	
X0	U/D						U/D			U/D		U	U		U		A	A		A	I00□	○	
X1		U/D					R			R		D	D		D		B	B		B	I10□	○	
X2			U/D					U/D			U/D		R		R				R		R	I20□	○
X3				U/D				R			R			U		U			A		I30□	○	
X4					U/D				U/D					D		D			B		I40□	○	
X5						U/D			R					R		R			R		I50□	○	
X6										S					S					S			
X7											S					S							

U: Up Counter Input; D: Down Counter input; A: A-Phase Counter Input; B: B-Phase Counter Input
 U/D: Up / Down Count Input; R: Reset Counter Input; S: Start-up Counter Input

- X0~X7 cannot be repeatedly used. Each point can only choose 1 function from table above to execute.
- All high speed input function can complete the counting by interrupt insertion, and the total frequency of the interrupt inserting should not be more than 20KHz.

Calculation Method of the Total Interrupt Insertion Frequency

(Total of 1-Phase Counter Frequency) + (Total of 2-Phases Counter Frequency) +
 (Total of A/B-Phase Counter Frequency x 2) + Input Pulse Frequency of Speed Detection (SPD)
 Instruction = Total Frequency of Interrupt Insertion *This value should not be more than 20KHz.

5. Output Specifications and External Wiring

Design Safety Guidelines



DANGER

- External protective circuits should be designed for a PLC to avoid mechanical damage. E.g. Emergency Stop, Forward/Reverse Inter-Lock or Upper/Lower Limit Positioning.
- A PLC may not be able to control the ON/OFF state when error occurs to its output relay and transistor, etc. So for crucial output signals which could cause major accident, some external safety circuit and agencies should be designed, to make sure the mechanical devices operate with safety.

Wiring Safety Guidelines

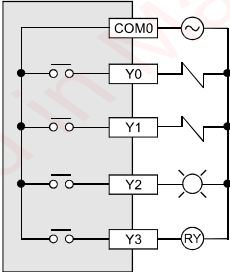


CAUTION

- When wiring AC supplies, it must be connected to correct input terminal, for if it is connected to DC (Direct Current) input/output terminal or DC power terminal, the PLC will be damaged.
- DO NOT connect the 24 V OUT \oplus terminal of a PLC main unit to the 24 V OUT \oplus terminal of an extension unit, or to the \oplus terminal of an external power supply, for it may damage the PLC.
- DO NOT do any external wiring for the empty terminals \square of a PLC, for it may damage the product.
- Connect the grounding terminal of the main unit using the class 3 grounding standard, but DO NOT ground it with major power systems. (Refer to 1-6)

5. Output Specifications and External Wiring


5-1 Output Point Specifications

Item		Specification
Output Type		Relay Output
Switched Voltages		\leq AC 250V / DC 30V
Rated Current	Resistive Load	2 A /point, 8 A /4 points COM
	Inductive Load	80VA
	Lamp Load	100W
Open Circuit Leakage		—
Output Response Time		10 ms approximately
Isolation Method		Mechanic Isolation
Circuit Diagram		

5. Output Specifications and External Wiring

5-2 Output Wiring Introduction

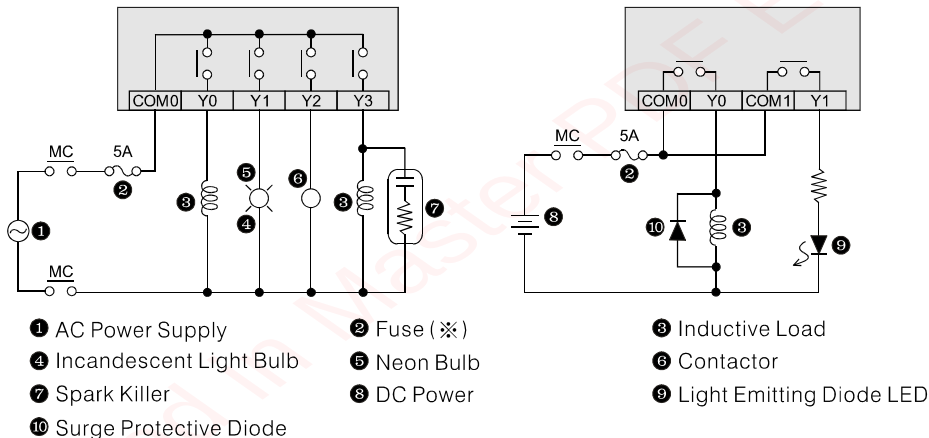- Relay Output Wiring Diagram



※ No fuse installed within the PLC's internal output circuit. Please install external fuse to avoid board circuit damage caused by short circuit of the load.

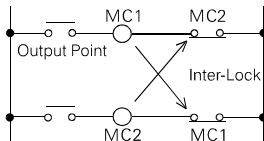
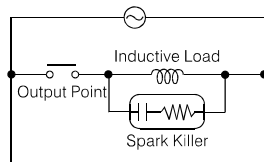
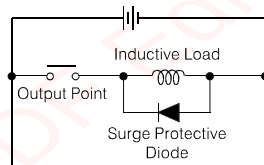
Install 2~3A fuse for single point COM circuit.

Install 5~10A fuse for 4 points COM circuit.

5. Output Specifications and External Wiring

5-3 Output Wiring Notes

- Please add parallel connected Surge Protective Diode to the 2 ends of the DC Inductive Load, as shown in the right hand side diagram, otherwise the pointer life time will be reduced significantly. When choose the Surge Protective Diode, note that the reverse voltage (VR) must be more than 5~10 times of the forward voltage (FR), and the forward current (IF) must be greater than the load current.
- Please add parallel connected Spark Killer to the 2 ends of the AC Inductive Load, as shown in the right hand side diagram, to reduce noise. A Spark Killer is made by serial connected resistor and capacitor ($0.1\mu\text{F} + 120\Omega$), and can be purchased from the producer.
- IT IS DANGEROUS to close the contactors used as the forward (FP)/reverse (RP) control at the same time. For such a load, an external inter-lock circuit should be set up as well as the inter-lock that controlled by the program within the PLC, as demonstrated in the right hand side diagram.




⚠ DANGER

5. Output Specifications and External Wiring

5-4 About the Y0 Output Point

The Y0 output point of VH series PLC has high speed output functions like pulse output, Pulse Width Modulation, etc. Y0 can be used as general output point when it is not used for high speed output.

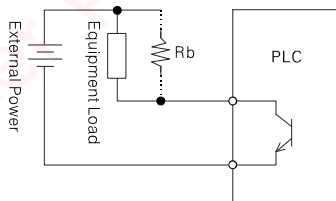- Use transistor output form for the output when Y0 used as high speed output point.
- The output point assigned by PLSY and PWM should not overlap with each other.
- The pulse frequency sent by Y0 of VH series PLC using PLSY instruction can be 7KHz at most.
- Since the PLSY and PWM instructions output need to have high speed reaction, please connect a parallel Rb resistor as demonstrated in the right hand side diagram and make the total load current to be 100 mA approximately, for the PLC output wave shape will be twisted by the longer OFF time of the transistor under light load. Calculate the power needed by the Rb resistor carefully, to avoid Rb resistor damage caused by overheats.



External Power	50mA Rb of the Load Current	100mA Rb of the Load Current
5V	100Ω 1W	50Ω 2W
12V	240Ω 2W	120Ω 3W
24V	480Ω 3W	240Ω 5W

6-1 Models of Optional Modules

The optional modules of VH series PLC are listed in the table below:

Slot	Model	Function
Communication Expansion Slot	VB-232	RS-232 Communication Expansion Card, extend the second communication port (CP2)
	VB-485	RS-422/RS-485 Communication Expansion Card, extend the second communication port (CP2)
Memory Card Expansion Slot	VB-RTC	<ul style="list-style-type: none"> ● Install the RTC (Real Time Clock) Expansion Card for PLC, to do automatic Date and Time control. ● Displays Year, Month, Day, Hour, Minute, Second and Week. ● Battery life is 5 years approximately @ 25°C. ● The special register M9005 will turn ON when the battery is running out of power.
	VB-MP1R	<ul style="list-style-type: none"> ● A memory card used by the VH and VB series PLC, to record program, component comments, program comments and data registers. ● Flash ROM Memory that can be written for more than 10,000 times. ● The program downloading/uploading function makes the program copy and device maintenance work easier. ● Built-in RTC (Real Time Clock) function, battery life is 5 years approximately @ 25°C. ● The special register M9005 will turn ON when the battery is running out of power.

※ The VH-10/14 MR Main Unit does not have communication expansion or memory card expansion slot.

6. Optional Modules


6-2 Communication Expansion Board

- VB-232 and VB-485 are the expansion cards for VH series PLC's second communication port (CP2).
- The second communication port of VH series PLC can execute Computer Link communication functions.
- Please install the communication expansion board when the power supply is OFF.

Install VB-232




- ① Switch off the PLC power
- ② Open the left side cover of the PLC Main Unit.
- ③ Take off the black screw in the upper left corner inside the left cover.
- ④ Install the base plug of VB-232 into the communication expansion slot.
- ⑤ Install the black screw in the upper left corner inside the left cover.
- ⑥ Lock the M3 self-tapping screw of the VB-232 into the mounting hole in the upper left corner inside the left cover

Install VB-485

- ① Switch off the PLC power
- ② Open the left side cover of the PLC Main Unit.
- ③ Take off the left side  shape plastic piece.
- ④ Take off the black screw in the upper left corner inside the left cover.
- ⑤ Install the base plug of VB-485 into the communication expansion slot.
- ⑥ Install the black screw in the upper left corner inside the left cover.
- ⑦ Lock the M3 self-tapping screw of the VB-485 into the mounting hole in the upper left corner inside the left cover

- There is a white-color JST4P outlet for both VB-232 and VB-485. It has the same functions as the white-color JST4P outlet on the main unit, since installing the communication expansion card will block the white-color JST4P outlet on the main unit.

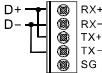6. Optional Modules

Item	VB-232	VB-485
Communication Interface	RS-232C	RS-422/RS-485
Isolation Method	No Isolation	
LED Indicator	RXD · TXD	
Max. Communication Distance	15 Meters	50 Meters
Power Supply	DC5V 10mA (from PLC power supply)	DC5V 60mA (from PLC Power Supply)
Communication Protocol	Computer Link - The shared communication protocol of M, VB and VH series PLC	
Communication Method	Half-duplex	
Communication Speed	4800/9600/19200/38400 bps	
Communication Parameters	Data length: 7 bits (ASCII) Parity: EVEN Stop Bit: 1 bit	
Number of Connected Station	1	256 Max. (Install amplification device if more than 32 stations)
Data Transfer Range	Includes all the X, Y, M, S, T, C, D	
Wiring Method	 <p>2 : RXD 3 : TXD 5 : SG</p> <p>D-Sub Connector 9Pin Male Connector</p>	<p>PCB Style Terminal Block</p>  <p>Remarks: 1. RS-485 Wiring Method</p>  <p>2. SW1 is the terminal resistance switch. (Terminal resistance 120Ω)</p>
Parameter Configuration	For CP2 relevant parameter configuration settings please use the "System CPU Expansion Card's Communication Port Setting" function of the programming software Ladder Master.	

6. Optional Modules

6-3 Memory Card Slot Expansion Card

- Install the Memory Card Slot Expansion Card

- ① Switch off the PLC power
- ② Open the right side cover of the PLC Main Unit.
- ③ Confirm the expansion card position, make sure the battery on the card is at the right hand side.
- ④ Plug the card into the slot in the cover with a proper strength; be careful not to damage the main unit circuit.
- ⑤ Make sure the connector of the expansion card binds with the slot connector tightly, to finish the installation.

 
- About the reading and configuration of the RTC (Real Time Clock) time.

Reading the RTC Time

The PLC program will automatically read the RTC time after the RTC installed to the Main Unit, and store it in D9013~D9019 for user reference.

- Un-install Memory Card Slot Expansion Card

Switch off the PLC power when un-install the expansion card. Use the small “-” shape screw driver or the IC clip to clip the auxiliary nick hole and take out the expansion card.




Configure the RTC Time

The user can configure the RTC time in 2 ways:

1. Use the “System-RTC Settings” function in Ladder Master to configure.
2. Use instruction (FNC167 TWR) to set the RTC time. This method can be used with supplementary devices like the HMI to change the RTC time.

6-4 Use the VB-MP1R

 - There are 3 switches on the VB-MP1R expansion card and their functions are described below:



WE/WP Write Protect Switch WE: Write allowed/WP: Write forbidden

P ▶ M Program Upload Switch PLC program upload to MP1R enabled when it slides to the left.

M ▶ P Program Download Switch MP1R program download to PLC enabled when it slides to the left.

- Operation flow of uploading/downloading program using VB-MP1R

① Put the switch on the VB-MP1R to the right position as listed in the table below:

Function	WE/WP	P ▶ M	M ▶ P
Upload Program	WE (Left)	ON (Left)	OFF (Right)
Download Program	WP (Right)	OFF (Right)	ON (Left)

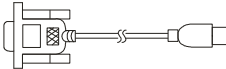
 
 
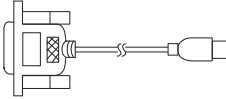
 
 
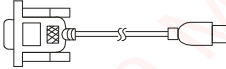
 
 
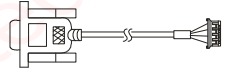
 

- Switch off the PLC power and install the VB-MP1R in the correct direction.
- Switch on the power and start uploading/downloading programs. First the ERR LED indicator on the PLC Main Unit will flicker for 3 times then go off. During the whole process of the uploading /downloading, the ERR LED will be on all the time, and it will not take more than 1 (second of the program). If anything goes wrong during the function execution process, the ERR LED will be flickering all the time.
- Switch off the power and take out the VB-MP1R expansion card.

6. Optional Modules

NOTICE

- Always put the WE/WP switch to WP when the VB-MP1R is not used for program uploading.
- Error occurs when executing uploading/downloading for the following reasons:
 - ① Password has been set for the source program
 - ② WE/WP switch is at WP when uploading.
 - ③ P ► M and M ► P switches are both at the ON (Left) side.
 - ④ Improper installation of the VB-MP1R expansion card.
 - ⑤ VB-MP1R or the PLC is malfunctioning.
- The program in the VB-MP1R will be executed first when the PLC is installed with a VB-MP1R card. And at this time, when a programming tool (e.g. Ladder Master) doing uploading/downloading, it acts for the memory in VB-MP1R as well.

6-5 Connection Cables

Model	Picture	Connection Illustrations	Application
MWPC-200 (Length: 200cm/6'7")		  DSUB 9P Female Connector	<ul style="list-style-type: none"> PC ↔ VB, VH or M Series PLC
MWPC25-200 (Length: 200cm/6'7")		  DSUB 25P Female Connector	<ul style="list-style-type: none"> PC ↔ VB, VH or M Series PLC Hitech HMI ↔ VB, VH or M Series PLC
MWMD-200 (Length: 200cm/6'7")		  DSUB 9P Male Connector	<ul style="list-style-type: none"> MODEM ↔ VB, VH or M Series PLC EASY VIEW HMI ↔ VB, VH or M Series PLC
VBPC09-200 (Length: 200cm/6'7")		  DSUB 9P Female Connector	<ul style="list-style-type: none"> PC ↔ VB or VH Series PLC

6. Optional Modules

Model	Picture	Connection Illustrations	Application	
VBPC25-200 (Length: 200cm/6'7")		 13 1 25 14 DSUB 25P Female Connector	 5—1 3—3 2—2 7—4 6 20	<ul style="list-style-type: none"> ● PC↔VB or VH Series PLC ● Hitech HMI↔VB or VH Series PLC
VBMD09-200 (Length: 200cm/6'7")		 1 5 6 9 DSUB 9P Male Connector	 7—1 2—2 3—3 5—4 4 6	<ul style="list-style-type: none"> ● MODEM↔VB or VH Series PLC ● EASY VIEW HMI↔VB or VH Series PLC
VBFDHMI-200 (Length: 200cm/6'7")		 1 13 14 25 DSUB 25P Male Connector	 2—2 3—3 7—4 4 5	<ul style="list-style-type: none"> ● FUJI HMI↔VB or VH Series PLC ● DIGITAL HMI↔VB or VH Series PLC
VHEC-050 (Length: 50cm/19.7")		—	<ul style="list-style-type: none"> ● Extended cable for a VH Series PLC Extension Unit/Module. (Keep away from interference during wiring job for the data transferred in this extended cable is unprotected and easy to get interferred.) 	

7. Operation Rehearsal, Maintenance and Error Checking

Operation and Maintenance Safety Notes **DANGER**

- DO NOT contact the terminal when the power supply switched on, to avoid electric shock or product mis-reaction.
- Switch off the power supply before clean or tighten the terminal, to avoid electric shock.
- Carry program-change-in-operation (force output, RUN, STOP, etc) ONLY after carefully read and understand this manual and safety is ensured, for misoperation may cause equipment damage or accident.

Operation and Maintenance Safety Notes **CAUTION**

- Switch off the power supply before assemble or overhaul the selected optional units, to avoid damage to the expansion or main units.
- Switch off the power supply before assemble or overhaul the connection cable, to avoid damage or misoperation.
- DO NOT assemble or overhaul the product cage, or alter it by yourself, for it may cause product damage, mis-reaction or fire.
- Contact the nearest distributor or Vigor Electric Corp directly for any product repairing matters.

7. Operation Rehearsal, Maintenance and Error Checking

7-1 Operation Rehearsal

- Perform the pre-rehearsal examination with the power supply switched OFF.
Incorrect power terminal connection, short circuit of DC input and power supply wirings or short circuit of output wirings will cause severe damage to the PLC. So DO check the power and input/output wirings before switch on the power, to make sure everything correct.
- Perform the program examination when the power supply ON and PLC STOP.
Upload the program within the PLC using programming tool and make sure it is correct. The user can also use the “compile program” function of the programming tool to make sure the circuit and grammar are correct.
- RUN/STOP Switch of the PLC
There is a RUN/STOP switch on the PLC. When the PLC power goes from OFFON, the PLC will enter RUN/STOP mode according to the setting of the RUN/STOP switch. And then the RUN/STOP status can be controlled by the RUN/STOP switch and the programming tool.
- Perform the operation rehearsal test when the power is ON and PLC is RUN.
The CPU will execute self-examine function once the PLC power goes from OFFON.
If there is no exception, the PLC enters operation mode. (RUN LED is ON.)
If there is program error (grammar or circuit error), the ERR LED will flicker, and PLC stop running.
If there WDT triggered, the ERR LED will flicker, and PLC stop running.
Force ON/OFF action can be performed on many components during the program operation.

7. Operation Rehearsal, Maintenance and Error Checking

7-2 Determine Exceptional Behavior through the LED Indicator

When problem occurs during PLC operation, check the power supply voltage, the terminal screw and connection cable (may be loose), and the I/O component (may be faulty). Then check the PLC LED indicator. These indicators help to analyze the error is caused by PLC or external components.

- PWR Power Indicator LED (Green)

When power supplied, the PWR indicator LED on main unit panel will be ON. If it is not, check the power circuit wiring and make sure correct voltage is used. Else, may send PLC back for repairing.

- RUN Operation Indicator LED (Green)

When the PLC operates well, the RUN indicator LED on the Main Unit panel will be ON. If the PLC is at STOP status or any error occurs, the RUN LED will be OFF.

- ERR Error Indicator LED (Red)

When error occurs to the PLC, the error indicator LED ERR on main unit panel will be ON or flickering.

<ERR LED Flicker>

ERR LED flickers when program changed by improper use, broken circuit, exceptional interruption, and invasion by conductive materials, PLC will STOP and all outputs turn OFF. When this happens, please double-check the program, and whether there is powerful interruption source or conductive materials invasion.

<ERR LED ON>

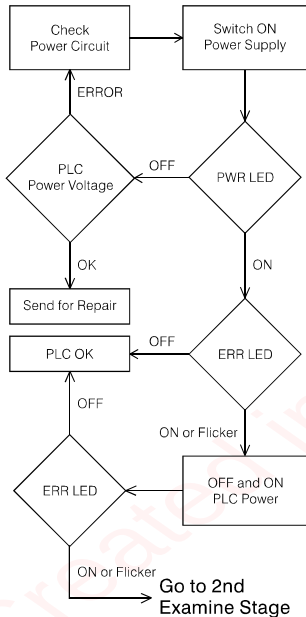
ERR LED turns ON when the CPU out of control and WDT occurs caused by PLC circuit broken or exceptional external interruption, PLC will STOP and all outputs turn OFF. When this happens, please switch off the PLC power supply and switch it on again. If this recovers the PLC normal operation, please double-check whether there is powerful interruption source and whether the PLC grounding is fine. If the ERR LED is still ON, the PLC may be faulty, consider sending it back for overhauling.

7. Operation Rehearsal, Maintenance and Error Checking


- INPUT X Input Status Indicator LED (Upper half of the Display)
 - (1) If the input status indicator LED is not as expectation, please make sure the external input switch status is fine.
 - (2) Loose switch contact may be caused by over-strong input switch current or invasion of oily dirt.
 - (3) When parallel LED circuit included in the input switch, the input signal of the PLC may be ON even when the switch is OFF.
 - (4) The sensitivity of photoelectric switches might be affected by dirt-stuck, and cause it failed to switch to ON mode.
 - (5) The PLC may not be able to judge the input status accurately if the input switch ON/OFF time is shorter than the PLC scanning time.
 - (6) The PLC input circuit may not be able to work well when the DC24V power supply used by it is excessively used or has short circuit.
 - (7) The input circuit might be damaged if the voltage put on it exceeds the appointed limit.
- OUTPUT Y Output Status Indicator LED (Lower half of the Display)
 - (1) If the load doesn't work as the output indicator LED status, please check whether the external load function is fine.
 - (2) Melting or short circuit of the PLC output point may be caused by overload, short circuit load or surge current of the capacitor load.
 - (3) Relay point loose contact may be caused by the excessively frequent action of the PLC output point.
- Refer to the Error Examination Flow Chart on the next page for advance examinations.

7. Operation Rehearsal, Maintenance and Error Checking


First Examine Stage



Second Examine Stage

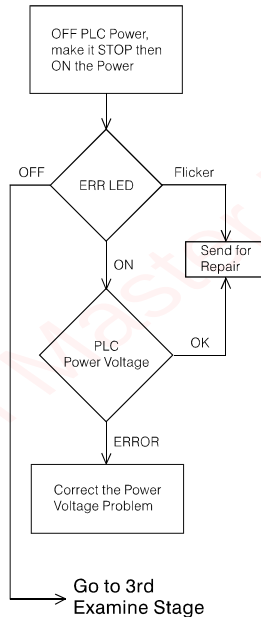

Third Examine Stage

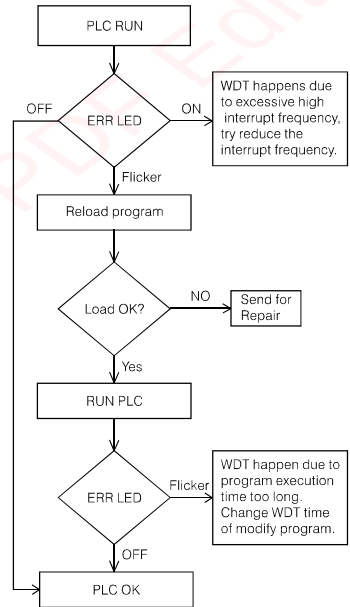

7. Operation Rehearsal, Maintenance and Error Checking

7-3 Maintenance

Recycling Safety Notes CAUTION

- Dispose the product as industrial waste when it is to be discarded as worthless.
- The product does not include short-life consumptive parts, so there is usually no need to change parts.
- If the output relay works frequently, or is used to drive big capacity load, please perform constant check on it.
- Perform the following general checks constantly:
 - (1) Does other heat source or direct sunlight cause the internal temperature of PLC raise abnormally?
 - (2) Is there dust or conductive dust invasion into the PLC?
 - (3) Do any of the connection cables or connection terminals, etc, become loose?